

DATA SHEET

TM 110

Temperature transmitter



Configurable outputs



1 or 2 analog outputs

- Range from 0 to +50 °C (ambient and airtight ambient models), from -20 to +80 °C (duct model) and from -100 to +400 °C (model with Pt100 terminal block)
- 0-10 V output, active, power supply 24 Vac/Vdc (3-4 wires) or 4-20 mA


- output, passive loop, power supply from 16 to 30 Vdc (2 wires)
- ABS V0 housing, IP65
- "1/4 turn" system mounting with wall-mount plate
- Housing with simplified mounting system




Features of the housing

Material	ABS V0 as per UL94
Protection index	IP65 Duct and airtight ambient models and model with terminal block
Display	LCD 10 digits Size: 50 x 17 mm
Height of digits	Values: 10 mm; Units: 5 mm
Cable gland	For cables Ø8 mm maximum Duct model and model with terminal block
Weight	162 g


Ambient model

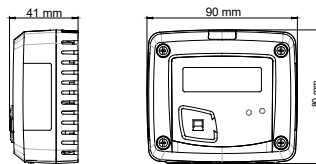

Duct model, stainless steel probe*

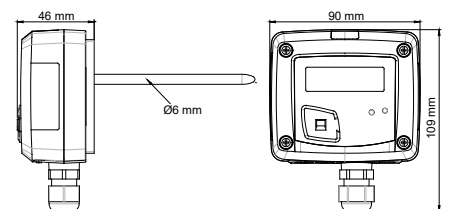


Model with terminal block*

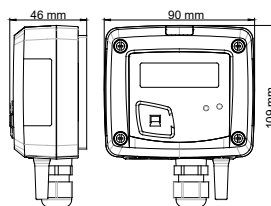

Stainless steel probe technical specifications (duct model): Ø6 mm contact tip; available lengths: 100 mm, 150 mm, 200 mm, 250 mm or 300 mm.

Airtight ambient model

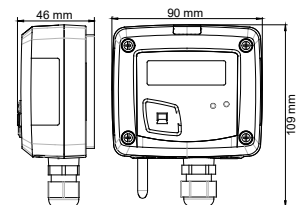

Part number

TM110	A	O	AI	6	100
Power supply / Output A: Active – 24 Vac/Vdc – 0-10 V P: Passive – 16/30 Vdc – 4-20 mA	Display O: With display N: Without display	Model B: Terminal block AI: Stainless steel duct S: Ambient E: Airtight ambient	Stainless steel probe diameter** 6: Ø6 mm	Stainless steel probe length** 100: 100 mm 150: 150 mm 200: 200 mm 250: 250 mm 300: 300 mm	

Example: TM110-AOAI-6-100

Temperature transmitter, active, with display and stainless steel duct mounting, 6 mm diameter and 100 mm length stainless steel probe.

* Several probes available in option

** Duct model only: stainless steel probe specifications

Technical features

Units of measurement	°C, °F
Measuring range	From 0 to 50 °C (ambient model and airtight ambient models), from -20 to +80 °C (duct model) and from -50 to +400 °C (model with terminal block)
Accuracies*	±0.2 °C (+10 ~ +30 °C) , ±0.1 °C (special calibration at +10 ~ +30 °C)
Type of sensors	Pt100 (model with terminal block, airtight ambient model and duct model) NTC (ambient model)
Response time	1/e (63%) 20 sec.
Resolution	0.1 °C
Type of fluid	Air and neutral gases
Conditions of use (°C/%RH/m)	From 0 to +50 °C In non-condensing condition. From 0 to 2000 m
Storage temperature	From -10 to +70 °C

*All the accuracies indicated in this technical datasheet were stated in laboratory conditions, and can be guaranteed for measurements carried out in the same conditions, or carried out with calibration compensation.

Technical specifications

Output / Power supply	Active sensor 0-10 V (power supply 24 Vac/Vdc ±10%), 3-4 wires Passive loop sensor 4-20 mA (power supply 16/30 Vdc), 2 wires Common mode voltage <30 VAC Maximum load: 500 Ohms (4-20 mA) / minimum load: 1 K Ohms (0-10 V)
Consumption	2 VA (0-10 V) , 0.6 VA (4-20 mA)
European directives	2014/30/EU EMC; 2014/35/EU Low Voltage 2011/65/EU RoHS II; 2012/19/EU WEEE
Electrical connection	Screw terminal block for cables from 0.05 to 2.5 mm² or from 30 to 14 AWG Carried out according to the code of good practice
PC communication	USB-mini DIN cable
Environment	Air and neutral gases




Simplified calibration

Electronic board and measuring element fixed to the front panel of the sensor, allowing you to leave your installation intact to configure or calibrate your instruments.

Monostats / 110 range

Connections


- 1. Terminal block (only for model with terminal block)
- 2. Switch
- 3. LCC-S software connection
- 4. Output terminal block
- 5. Power supply terminal block
- 6. Cable gland

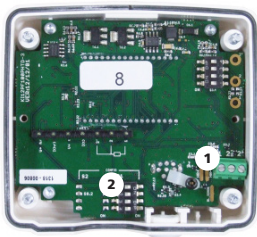

Inside the front housing



Removable front face

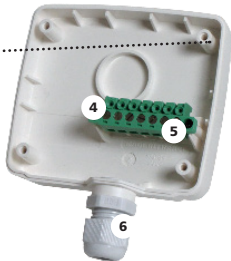

Fixed back housing


Symbols used

For your safety and in order to avoid any damage of the device, please follow the procedure described in this document and read carefully the notes preceded by the following symbol:

The following symbol will also be used in this document, please read carefully the information notes indicated after this symbol:



Connection of a Pt100 probe on terminal block

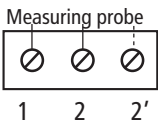


Warning: In case of a 2-wire probe used, carry out a shunt between 2 and 2'.

Electrical connections as per NFC15-100




This connection must be made by a qualified and trained technician. To make the connection, the transmitter **MUST NOT BE ENERGIZED**.


For **TM110 – AO** and **TM110 – AN** models with 0-10 V output – **active, 4 wires**:

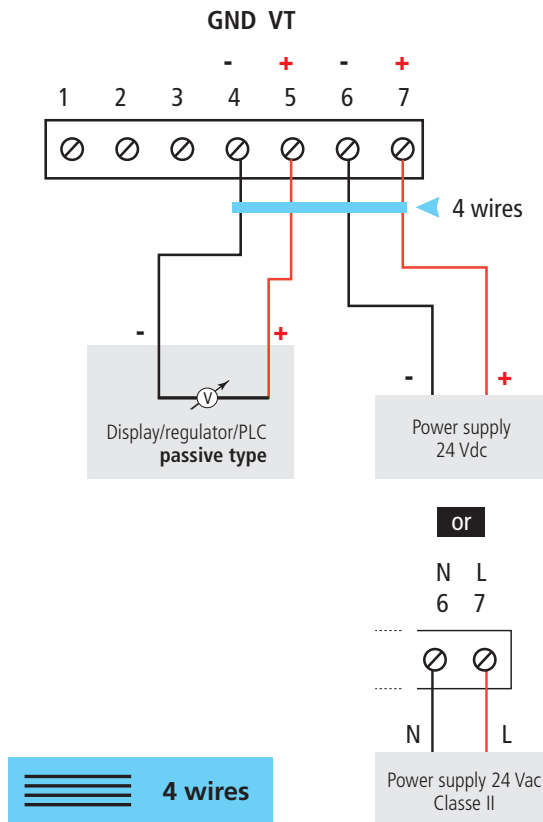

To make a 3-wire connection, **BEFORE POWERING UP THE TRANSMITTER** please connect the output ground to the input ground. See drawing below.

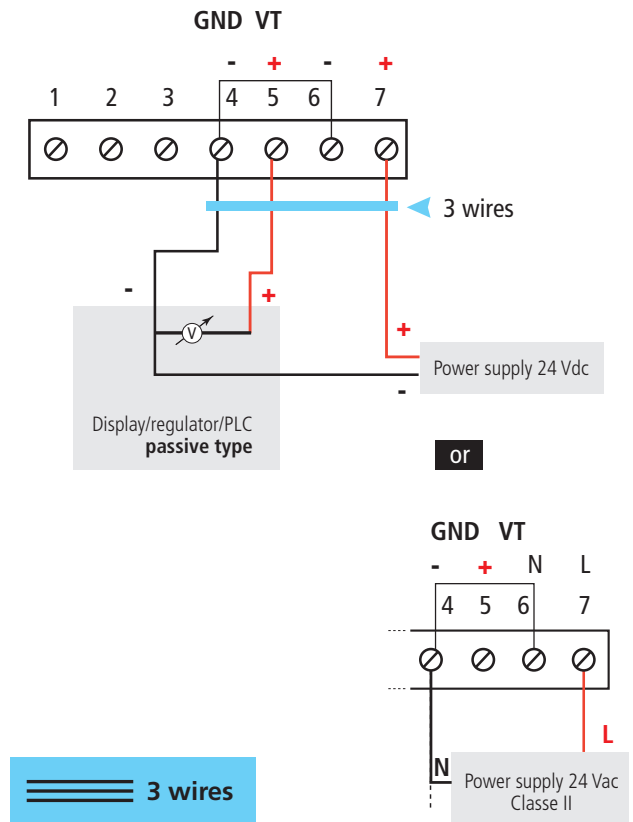

For **TM110 – PO** and **TM110 – PN** models with 4-20 mA output – **passive**:

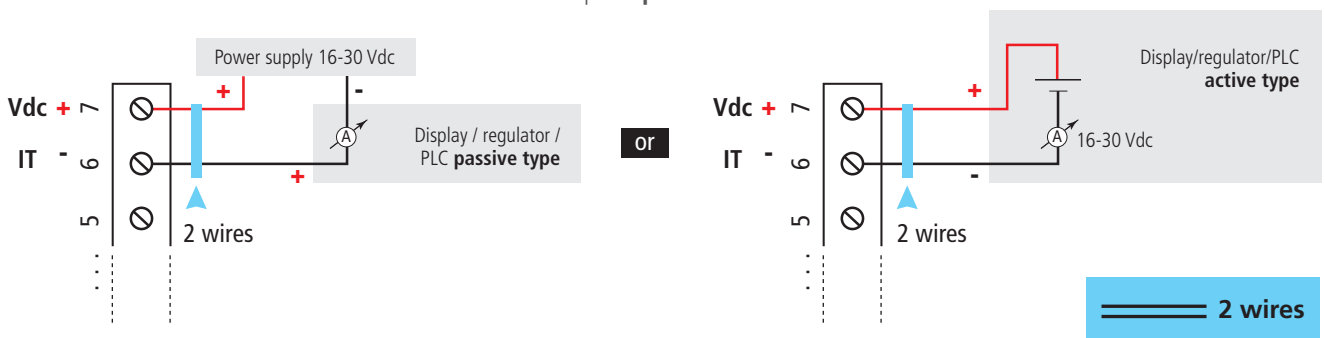


Settings and use of the transmitter

Configuration



CAUTION: the transmitter **MUST NOT BE ENERGIZED** before a configuration. Then, proceed to the required settings, with the DIP switches (as shown on the drawings hereafter). Once the transmitter configured, it can be powered up.

To configure the transmitter, unscrew the 4 screws of the casing then open it. The switches allowing the different settings are accessible.

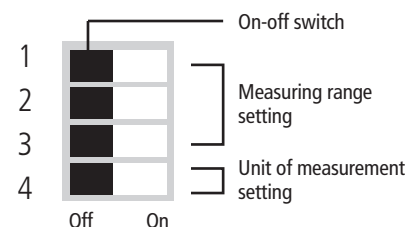

Measuring range setting

To set a measuring range, put the on-switches 1, 2 and 3 of the measuring ranges as shown in the following table.

Configurations	From 0 to +50 °C	From -20 to +80 °C	From -50 to +50 °C	From 0 to +100 °C	From 0 to +200 °C	From 0 to +400 °C
Combinations	1 2 3 4	1 2 3 4	1 2 3 4	1 2 3 4	1 2 3 4	1 2 3 4

Unit of measurement setting

To set the unit of measurement, put the on-off switch 4 as shown in the following table.

Configurations	°C	°F
Combinations	1 2 3 4	1 2 3 4

Configuration via LCC-S software (option)

An easy and friendly configuration with the software!
It is possible to configure intermediate ranges.

⚠ The minimum difference between the high range and the low range is 20.

Example: for a 0-100 °C transmitter, the minimum delta of the range is 20 °C. It is then possible to configure the transmitter from 0 to +100 °C, or from 0 to +20 °C, etc.


To access the configuration via software:

Set the DIP switches as shown beside.

Connect the cable of the LCC-S to the connection of the transmitter.

⚠ The configuration of the parameters can be done either with the DIP switch or via software (you can not combine both solutions).

PC configuration

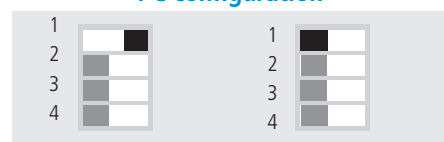

Left switch

Right switch


Please refer to the optional LCC-S software to make the configuration.

Mounting

To install the transmitter, mount the ABS plate on the wall (drilling: Ø6 mm, screws and pins are supplied).

Insert the transmitter on the fixing plate (see A on the drawing beside). Rotate the housing in clockwise direction until you hear a "click" which confirms that the transmitter is correctly installed.

⚠ The mounting plate is not available for ambient models. 4 fixing holes inside the back housing can be used to install the transmitter on the required location.

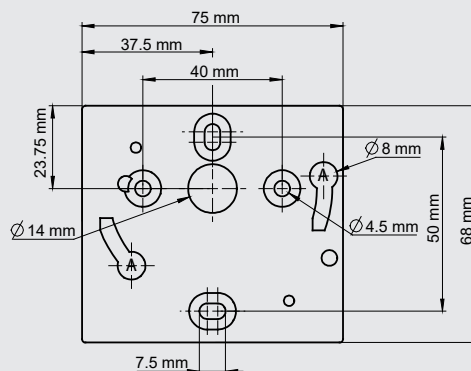

Maintenance: please avoid any aggressive solvent. Please protect the transmitter and its probes from any cleaning product containing formalin, that may be used for cleaning rooms or ducts.

Precautions for use: please always use the device in accordance with its intended use and within parameters described in the technical features in order not to compromise the protection ensured by the device.

Accessories

Part number	Description
KIAL-100A	Power supply class 2, 230 Vac input, 24 Vac output
KIAL-100C	Power supply class 2, 230 Vac input, 24 Vdc output
LCC-S	Configuration software with USB cable

Pt100 2 or 3 wires or NTC stainless steel probe for duct and remote models



Only the accessories supplied with the device must be used.

Warranty

Instruments have 1-year guarantee for any manufacturing defect.