

PROFESSIONAL SOLUTIONS FOR CONDENSATE MANAGEMENT AND INDOOR AIR QUALITY MEASUREMENT



ABOUT US



For more than 45 years, Sauermann Group has designed, manufactured and sold products and services dedicated to the industrial and HVACR markets. The Group specifically focuses on the detection, measurement and control of indoor air quality (IAQ).

Member of the Verder group, Sauermann group operates two main brands:

- The **Sauermann** brand, through condensate removal pumps, instruments and accessories, primarily addresses the needs of Heating, Ventilation, A/C or Refrigeration contractors.
- The **Kimo** brand, through measuring instruments, meets the air management needs in light commercial and industrial installations.

HIGH ACCURACY
UNMATCHED RELIABILITY
MULTIPLE APPLICATIONS

Measurement instruments: Sauermann measurement instruments monitor a broad spectrum of indoor air quality parameters and serve a wide range of applications, from building ventilation (heating and air conditioning) systems, to cold-chain installations and combustion gas analysis. Backed by our testing laboratories and in-house research and development programme, Sauermann instruments deliver the accuracy and reliability that HVACR engineers need.

LOW SOUND LEVEL
LOW FAIL RATE
HIGH PERFORMANCE

Condensate management solutions: Safe and effective condensate management for air quality systems can be a challenge. Sauermann pumps are designed to look good, while our patented piston technology delivers whisper-quiet operation and unrivalled reliability.



Heating



Ventilation



Air conditioning



Refrigeration

OUR PRODUCTS & MARKETS

● **Climate systems engineering:**

Heating & air conditioning installers, inspection bodies, technical consulting firms, air treatment unit manufacturers, system tuners, operation & maintenance contractors, etc.

◆ **High-tech industries:**

Pharmaceutical & cosmetics laboratories, electronics manufacturers, etc.

◆ **Heavy industries:** Food processing, paper, automotive, nuclear, etc.

■ **Commercial:** Hospitals, glasshouses, museums, farms, temperature-controlled transport, etc.

OUR EXPERTISE

ACCREDITED MEASUREMENT LABORATORIES, IN-HOUSE RESEARCH AND DEVELOPMENT



Sauermann products and services are backed by cutting-edge facilities and expertise: a team of over 20 experts working at multiple testing and calibration laboratories worldwide, and production lines in France, the United States and China.

Our in-house research and development programme – spearheaded by a young, forward-looking group of 20 engineers and 10 technicians – has three aims: to push the boundaries of innovation in ergonomic design, digital technology and connected objects, to patent our technologies, and to consistently set new standards for electronic and mechanical performance in our products.



Over 20 patents, including our oscillating piston pump technology and the foldable frame system found on our DBM 620 air flow meter.

Over 800 sq m of laboratory space

Our experts provide adjustment and calibration services for our measurement instruments.

Customer service staff trained by our experts


Our team is here to advise and quote you for the service you need.

After-sales service within our production lines

Our technicians maintain and repair your devices right where they're made.

Our measurement expertise covers a wide range of fields:

Pressure	Radiometry	Gas analysis
Temperature	Tachometry	Light measurement
Humidity	Air velocity	Electrical current
Weighing	Air flow	Acoustics

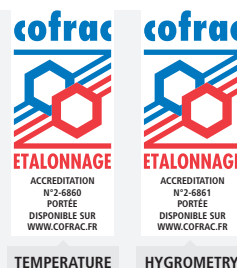


Sauermann Industrie, Laboratories, located in Montpon (FR), accredited to standard NF EN ISO/IEC 17025



Accreditation Sauermann Iberica ENAC UNE EN 17025 : 2017



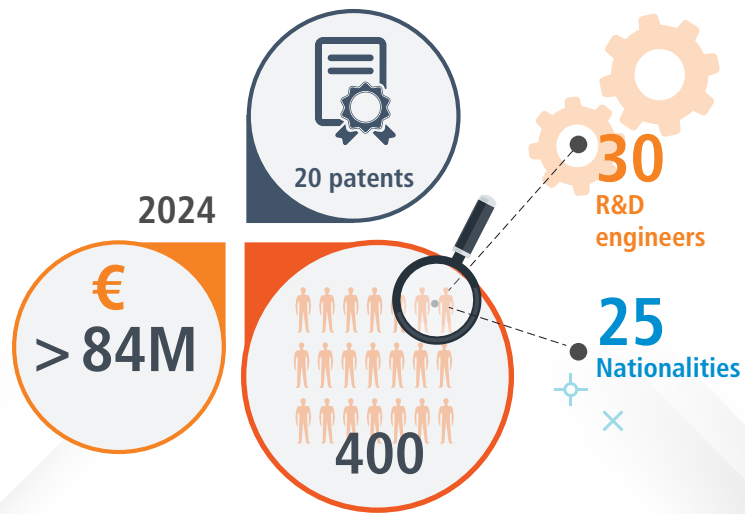

2019
Sauermann Group acquires Megatech



2024
Sauermann joins the Verder Group




2015
Sauermann and Kimo join forces



2018
Sauermann Group acquires E Instruments in the U.S.


4 Factories

12 Sites

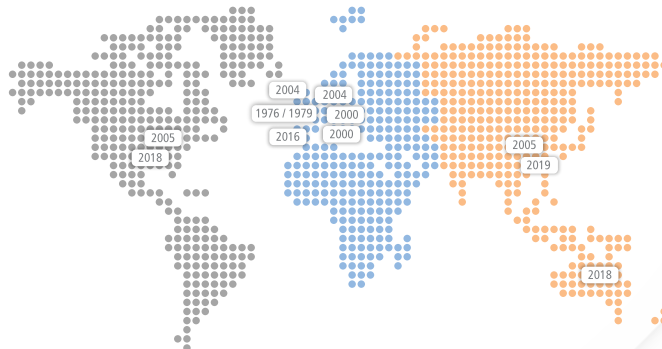


1985

Expansion into Indoor Air Quality digital measuring tools.



1993

Sauermann Group is the first to launch a condensate removal pump with piston technology.

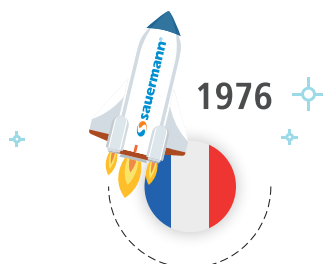

Contents

COMBUSTION GAS ANALYSERS

16



NEW

DIGITAL MANIFOLD

26

NEW

PERISTALTIC PUMPS

43



Si-1931

ANTI-BIOFILM SOLUTION



55

HVACR measurement instruments 08

Mobile app	09
Applications	10
Si-PM3, Si-TT3, Si-HH3, Si-TI3	12
Si-VV3, Si-VH3, Si-CD3, Si-RD3	13
Technical information	14
Measuring ranges	15

Combustion gas analysers 16

Features	17
Si-CA 030 / 130 / 230	18
Mobile app	19
Selection guide	20
Available kits	21

Digital manifold 22

Product overview	23
Probes and accessories	26
Mobile app	28
Available kits	29
Si-RM3 / Si-RM13	30
Si-RV3	31
Si-Manifold	32

Services 33

Mini pumps 34

The reliability of Sauermann pumps in 5 major qualities	36
Applications	37
Delta pack, Si-10	39
Omega pack, Si-20	40
Si-30, Si-33	41
Si-60	42
Si-50, Si-51, Si-52	43

Tank pumps 44

Applications	45
Si-82	46
Si-83	47
SI 1805	48
Si-1830, SI 1850	49
Si-60, Si-2052	50
Si-1931	51

Accessories 52

Pipes and fittings	52
Detection mini pumps	53
Centrifugal pumps	54
Neutralization	54
Miscellaneous	54
Anti biofilm	54

Sauermann online 55

MEASUREMENT INSTRUMENTS

Check. View. Optimise.



Heating



Ventilation




Air conditioning




Refrigeration



HVACR MEASUREMENT
INSTRUMENTS

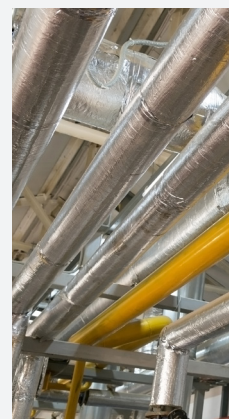

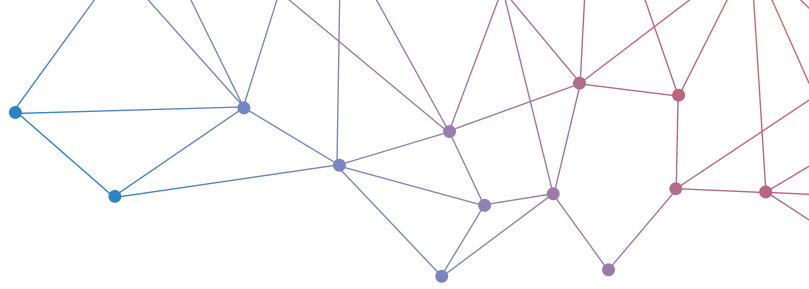

Sauermann's measurement instruments are backed by a 45-year track record in metrology, delivering unmatched reliability and a user experience that's second to none.

At Sauermann, our experience means we understand the needs of professionals the world over – and design tools to help them do their job better. Our instruments monitor the full spectrum of air quality parameters, catering to the entire HVACR and indoor air quality sector.

Indoor air quality Heat pumps **Heating** Healthcare High-tech industries Laboratories
Transport Residential, commercial & industrial boilers Environment **Refrigeration** Cold chain
Energy efficiency **Air conditioning** Research Livestock farming Combustion efficiency and emissions Agriculture



COMBUSTION GAS
ANALYSERS



DIGITAL
MANIFOLDS



HVACR measurement instruments

It's all about simplicity

Pressure / Temperature / Humidity / Air velocity / Air flow rate



Among other applications, the Si-PM3 differential pressure manometer can be used to check air treatment unit filters for clogging.

Our portable HVACR instruments cover a broad spectrum of measurements, from temperature, relative humidity and pressure, to air velocity and air flow rate.

We offer a full range of easy-to-use instruments: dual input thermometer (Si-TT3), infrared thermometer (Si-TI3), thermo-hygrometer (Si-HH3), digital differential pressure manometer (Si-PM3), vane thermo-anemometer (Si-VV3), hotwire thermo-anemometer (Si-VH3), gas leak detector (Si-CD3) and refrigerant leak detector (Si-RD3).

What's more, our user-friendly Si-HVACR Measurement MobileApp displays measurement data right on your smartphone or tablet.




Mobile app

Si-HVACR Measurement MobileApp

With the Si-HVACR Measurement MobileApp, users can view and record measurements in real time.

Key features:

- View parameters in user-friendly format
- Access previously saved measurements and charts (average, min. & max. values, etc.)
- Generate reports (PDF, CSV or XML) and add up to four photos

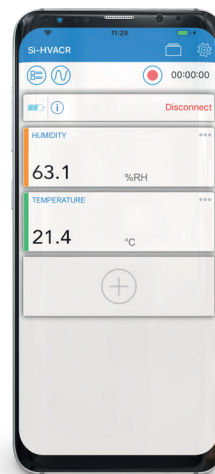

Backlit LCD screen



Low consumption device



Magnetic backing for easy fixing



Carrying bag



Calculated values on mobile app


Applications

Our devices provide everything HVACR engineers need for their routine operations


MEASURE AIR VELOCITY, FLOW RATE
AND TEMPERATURE AT GRILLES



CHECK INLET AND OUTLET TEMPERATURES
FOR WATER HEATING SYSTEMS

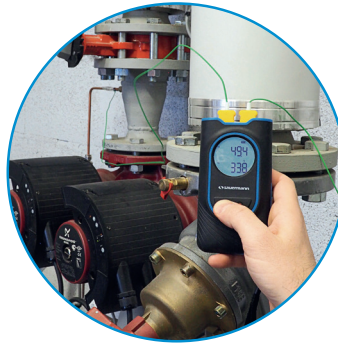

MEASURE DIFFERENTIAL PRESSURE BETWEEN THE FILTER
INLET AND OUTLET ON AN AIR TREATMENT UNIT

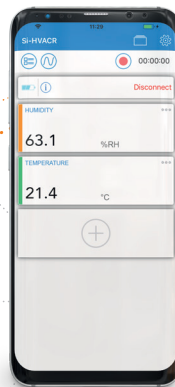

Remote control; records readings
and sends reports
(except Si-CD3 and Si-RD3 models)



MEASURE AIR VELOCITY, FLOW RATE AND
TEMPERATURE IN A PIPE

CHECK INLET AND OUTLET
TEMPERATURES FOR DOMESTIC HOT
WATER SYSTEMS



MEASURE AMBIENT AIR TEMPERATURE AND RELATIVE
HUMIDITY (DEW POINT AND WET BULB TEMPERATURE ARE
CALCULATED)



DETECTS LEAKS OF COMBUSTIBLE GASES
UPSTREAM OF A BOILER BURNER



DETECTS REFRIGERANT LEAKS
FROM A COOLING UNIT





Heating



Ventilation Air conditioning



Refrigeration

 Si-PM3 Digital differential pressure manometer	Gas-fired boilers	Ventilation circuit	
	- Measure pressure at the gas inlet valve. - Measure pressure drop (draught) at the flue.	- Check filter fouling. - Measure extractor fan pressure and air flow rate. - Measure air flow in a pipe.	
Tip : connect a Pitot tube to the instrument to measure air flow in a pipe. Use the smartphone app to calculate air flow rate by entering the pipe coefficient.			
 Si-TT3 Dual input thermocouple thermometer	Hot water boilers	Multifunction	Refrigerators, freezers
	- Compare the water temperature in the boiler inlet, outlet and return pipes.	- Ambient air temperature. - Air temperature in the pipes. - Temperature in domestic hot water systems.	- Measure superheat and sub-cooling of the refrigerant gas circuit.
Tip : a vital add-on for working on refrigeration systems if your manifold does not include a temperature probe.			
 Si-TI3 Infrared thermometer	Radiators		
	- Measure radiator hot and cold spots to determine if venting is required.		
Tip : vastly improves speed and convenience (measurements delivered remotely in real time). Can measure ambient temperature (via app). Capable of checking various temperature increases, including electrical heating. Affix a black strip on non-black surfaces and adjust the emissivity of the surface (as per the manual) for accurate measurement.			
 Si-HH3 Thermo-hygrometer		Ventilation	
		- Measure ambient air temperature and relative humidity.	
Tip : extreme relative humidity values (too high or too low) can pose hazards (allergies, germs, dust, mould, etc.). The app displays psychometric parameters such as dew point and wet bulb temperature.			
 Si-VV3 Vane thermo-anemometer		Air conditioning circuit	
		- Measure air flow through system inlet and outlet grilles.	
Tip : input the pipe cross-section in the app to calculate average air flow rate in addition to air velocity.			
 Si-VH3 Hotwire thermo-anemometer		Air conditioning circuit	
		- Measure air flow in pipes (and temperature).	
Tip : input the pipe cross-section dimensions in the app to calculate average air flow rate in addition to air velocity. Use the hotwire thermo-anemometer instead of a vane thermo-anemometer for low-velocity or laminar air flows.			
 Si-CD3 Gas leak detector	Gas-fired boilers		
	Detects leaks of combustible gases upstream of the boiler, at the inlet and inside the unit.		
Tip : a flexible probe keeps the device's sensor in contact with gas pipes in even the hardest-to-reach places. Pay special attention to joints in the circuit. Check the condition of the filter and replace it if necessary. Follow the manufacturer's recommendations for replacing the sensor.			
 Si-RD3 Refrigerant leak detector	Heat pumps	Air-conditioning units	Refrigerators, freezers
	Detects refrigerant leaks in every part of the cooling circuit.		
Tip : a flexible probe keeps the device's sensor in contact with gas pipes in even the hardest-to-reach places. Pay special attention to joints in the circuit. Check the condition of the filter and replace it if necessary. Follow the manufacturer's recommendations for replacing the sensor.			

Si-PM3

Digital differential pressure manometer

This pocket-sized manometer can take two pressure measurements simultaneously, and you can connect a Pitot tube to measure air velocity and flow rate in a pipe.

Reference: SIPM3



Air velocity and air flow with Pitot tube (optional)



Measuring range: -150 to +150 hPa (-60 to 60 inH₂O)



Si-TT3

Dual input thermocouple thermometer

This instrument uses thermocouple technology to take two temperature readings at once (between -200 °C/-328 °F and 1 300 °C/2 372 °F). Ideal for checking the inlet and outlet temperatures of water heating systems.

Reference: SITT3



Dual channel K thermocouple (2 probes included)



Accessory : 1 x K thermocouple wire probe class 2, between -40 and +260 °C (40 to 500 °F) (reference : SIACCTC)

Si-HH3

Thermo-hygrometer

This thermo-hygrometer is a turnkey solution for measuring temperature and relative humidity, while dew point and wet bulb temperature are calculated via the accompanying mobile app.

Reference: SIHH3



Measuring range: from 0 to 100%RH



Si-TI3

Infrared thermometer

Sauermann's Si-TI3 infrared thermometer is the ideal solution for contactless diagnosis, inspection and checking of surface temperatures.

Reference: SITI3



Optical: D.S 12:1



Adjustable emissivity

Si-VH3

Hotwire thermo-anemometer with telescopic probe

Sauermann's palm-sized Si-VH3 hotwire thermo-anemometer comes with a highly sensitive and accurate telescopic probe that easily measures air flow rate, velocity and temperature.

Reference: SIVH3



80 cm (31.5") telescopic probe with double graduation



Si-VW3

Vane thermo-anemometer with built-in vane probe

This thermo-anemometer, which features a vane probe with a long cable, can be used to measure air velocity and temperature at an air vent. Air flow rate is calculated via the accompanying mobile app.

Reference: SIVV3



Air velocity and air flow meter



Large vane probe with 2 m (78.74") cable

Si-CD3

Gas leak detector

The Si-CD3 gas leak detector is perfect for quickly and easily detecting even the slightest leaks of various combustible gases (methane, propane, isobutane, LPG and other hydrocarbons).

Reference: SICD3



30 cm flexible probe



Adjustable alarm



Si-RD3

Refrigerant leak detector

The Si-RD3 refrigerant leak detector uncovers leaks of most common refrigerant gases to a high degree of sensitivity, including all HCFC and HFC refrigerants, R1234yf, R1234ze, R290, R600a, and 5% hydrogen–95% nitrogen mixtures (Nidron 5 and Trace-A-Gas).

Reference: SIRD3



30 cm flexible probe



Visual and audio alarm

Technical information



	Si-PM3	Si-HH3	Si-TT3	Si-TI3	Si-VV3	Si-VH3	Si-CD3	Si-RD3
Differential pressure	✓	-	-	-	-	-	-	-
Air velocity and air flow rate with Pitot tube (optional)	✓	-	-	-	-	-	-	-
Relative humidity	-	✓	-	-	-	-	-	-
Dew point	-	✓	-	-	-	-	-	-
Absolute humidity	-	✓	-	-	-	-	-	-
Enthalpy	-	✓	-	-	-	-	-	-
Mixing ratio	-	✓	-	-	-	-	-	-
Wet bulb temperature	-	✓	-	-	-	-	-	-
NTC temperature	-	✓	-	-	✓	✓	-	-
K thermocouple temperature	-	-	✓	-	-	-	-	-
Infrared temperature	-	-	-	✓	-	-	-	-
Ambient temperature	-	✓	-	✓	-	-	-	-
Air velocity	-	-	-	-	✓	✓	-	-
Air flow	-	-	-	-	✓	✓	-	-
Combustible gases	-	-	-	-	-	-	✓	-
Refrigerant gases	-	-	-	-	-	-	-	✓
Carrying bag	✓	✓	✓	✓	✓	✓	✓	✓
Magnet at backside	✓	✓	✓	-	✓	✓	-	-
Auto shut-off	10 min	10 min	10 min	15 sec	10 min	10 min	0 to 120 min	15 min
Battery life	170 h	250 h	400 h	14 h	120 h	20 h	20 h	> 12 h
Mobile app	✓	✓	✓	✓	✓	✓	-	-
Warranty	2-year	2-year	2-year	2-year	2-year	2-year	2-year	2-year

Measuring ranges



Si-PM3

Si-HH3

Si-TT3

Si-TI3

Si-VV3

Si-VH3

Si-CD3

Si-RD3

Differential pressure	-150 to +150 hPa -60 to 60 inH ₂ O	-	-	-	-	-	-	-
Air velocity with Pitot tube (optional)	2 to 80 m/s 394 to 15,748 fpm	-	-	-	-	-	-	-
Air flow rate with Pitot tube (optional)	0 to 9,999 m ³ /h	-	-	-	-	-	-	-
Relative humidity	-	0 to 100 %HR	-	-	-	-	-	-
Dew point	-	-40 to +60 °C _{td} -40 to 140 °F _{td}	-	-	-	-	-	-
Absolute humidity	-	0 to 600 g/m ³	-	-	-	-	-	-
Enthalpy	-	0 to 10,000 kJ/kg	-	-	-	-	-	-
Mixing ratio	-	0 to 10,000 g/kg	-	-	-	-	-	-
Wet bulb temperature	-	0 to 60 °C _{tw} 32 to 140 °F _{tw}	-	-	-	-	-	-
NTC temperature	-	-20 to +60 °C -4 to 140 °F	-	-	-10 to +60 °C 14 to 140 °F	-10 to +60 °C 14 to 140 °F	-	-
K thermocouple temperature	-	-	-200 to +1,300 °C -328 to 2,372 °F	-	-	-	-	-
Infrared temperature	-	-	-	-40 to +500 °C -40 to 932 °F	-	-	-	-
Ambient temperature	-	-20 to +60 °C -4 to 140 °F	-	0 to 50 °C 32 to 122 °F	-	-	-	-
Air velocity	-	-	-	-	0,4 to 30 m/s 78.7 to 5,905 fpm	0 to 30 m/s 0 to 5,905 fpm	-	-
Air flow rate	-	-	-	-	0 to 9,999 m ³ /h 0 to 9,999 m ³ /min 0 to 9,999 m ³ /s 0 to 9,999 cfm	0 to 9,999 m ³ /h 0 to 9,999 m ³ /min 0 to 9,999 m ³ /s 0 to 9,999 cfm	-	-
CH ₄	-	-	-	-	-	-	0 to 10,000 ppm 0 to 1% vol 0 to 20% LEL	-
Refrigerant gases	-	-	-	-	-	-	-	0 to 3 g/year 0 to 30 g/year 0 to 300 g/year

Combustion gas analyzers

A new degree of efficiency



Our combustion gas analyzers are ideal for maintaining combustion equipment, covering the full range of operations in residential, commercial and industrial applications.

Sauermann offers a range of compact and intuitive analysers to enhance your performance.

Sauermann's combustion gas analyzers feature the latest digital and metrology technologies, making measurements more reliable and cutting the amount of time heating engineers need to spend on-site. A user experience like no other!

Applications

- Boilers
- Burners
- Water heaters
- Gas and diesel engines
- Furnaces
- Industrial kilns
- Industrial heating systems
- Incinerators



Residential



Commercial



Industrial

Features

Add a digital edge to your combustion analysis



**Auto pump cut-off
for high CO levels
(adjustable)**



**Predictive maintenance with
estimated sensor life
& calibration reminders**



**Draft & differential pressure
measurements**



**Mobile phone app for real-time
remote display & control**



**Calculations for
Combustion Efficiency,
Excess Air, & CO₂%**



**Data management with automatic
logging & report creation**



Si-CA 030



Si-CA 130



Si-CA 230

LCD display size	2.8 inches	4.3 inches	4.3 inches
Display resolution	320 x 240 pixels	480 x 272 pixels	480 x 272 pixels
Touch-screen display	No (5 buttons)	Yes (+ on/off button)	Yes (+ on/off button)
Dimensions (H x W x D)	9,9 x 19,4 x 4,9 cm 7.5 x 3.5 x 1.6"	9,9 x 19,4 x 4,9 cm 7.5 x 3.5 x 1.6"	11,2 x 28 x 5,5 cm 11 x 4.3 x 2"
Weight	350 g - 12 oz	350 g - 12 oz	825 g - 30 oz
No. of cells	Up to 3 (O ₂ , CO, NO)	Up to 3 (O ₂ , CO, NO, Low NO)	Up to 6 (O ₂ , CO, NO, Low NO, NO ₂ , Low NO ₂ , SO ₂ , Low SO ₂ , CxHy, H ₂ S)
Max. CO measurement	8,000 ppm	8,000 ppm	50,000 ppm (with dilution)
CO dilution	-	-	✓
Field replaceable pre-calibrated sensors	-	✓	✓
Flue gas velocity with Pitot tube	-	✓	✓
Measurement storage	Smartphone	Internal: 2,000 data points + Smartphone and PC	Internal: 2,000 data points + Smartphone and PC
PC software (wireless & USB)	-	✓	✓
Smartphone app (wireless)	✓	✓	✓
Combustion Applications	Residential, Commercial	Residential, Commercial	Commercial, Industrial



To see our extensive range of other measurement instruments for heating applications, go to www.sauermanngroup.com

Combustion gas analyzers

A new degree of efficiency



All the essentials for combustion gas analysis

Si-CA 030

- Calculated CO₂ % value
- CO safety monitoring in ambient air
- Combustion efficiency and excess air calculations
- Emissions values adjusted for reference O₂
- NOx capable with NO sensor
- Quick and easy pump On/Off control



Color display



Auto pump cut-off for high CO levels

Comprehensive, versatile analyzer with touch-screen display

Si-CA 130

- Calculated CO₂ % value
- CO safety monitoring in ambient air
- Combustion efficiency and excess air calculations
- Emissions values adjusted for reference O₂
- NOx and low NOx capable (optional)
- One Touch Pump On/Off with Purge
- Graphical data display
- Customisable gas analysis screen



Color display



Field replaceable precalibrated sensors



State-of-the-art, industrial emissions analyzer

Si-CA 230

- Ergonomic, light weight and durable design
- One touch pump On/Off with purge
- Graphical data display
- Customisable gas analysis screen
- Emissions values adjusted for reference O₂
- CO safety monitoring in ambient air



Total NOx & Low NOx Capable




Field Replaceable Pre-Calibrated Sensors

Mobile app

Sauermann Combustion

The **Sauermann Combustion app** lets you control your Si-CA analyzer remotely, view measurement results in real time, and customise them before exporting in the format of your choice.

- Free apps for iOS & Android mobile devices
- PC software with USB & wireless connectivity
- Fast, easy wireless connection
- Remote live view of combustion analysis data as list or graph
- Remote control to change settings
- Data saving, including automatic logging
- Report creation in PDF, CSV (for Excel) and XML formats
- Databases for customers, operators, & equipment

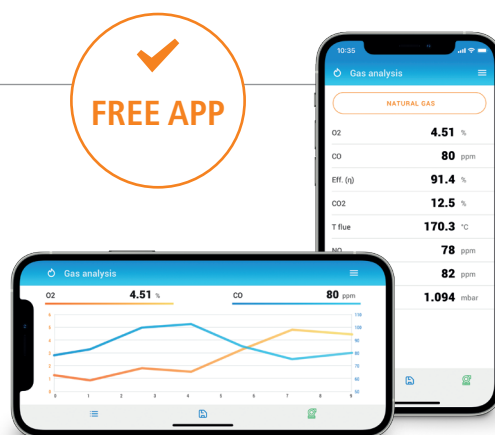

Download Sauermann Combustion app




Probes and accessories

Customize your own analyzer



Our combustion gas analysers are available in many different configurations, with a wide range of accessories to choose from. Contact our Customer Services team for more information about our kits and accessories, and for guidance on choosing the right options for your needs.

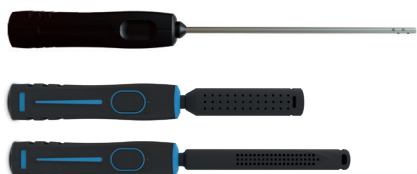

Smart air temperature probe with
2 m cable - Ref. 24646

Ambient CO probe - Ref. 27547

Ambient CO₂ probe - Ref. 27548



Flexible probe
180 mm - Ref. 27936



Probe
180 mm - Ref. 27532
300 mm - Ref. 27533
750 mm - Ref. 27534
1 m - Ref. 27535
1,5 m - Ref. 27536



Draft probe - Ref. 27544



Differential pressure kit - Ref. 27538



Smoke pump - Ref. 11994



Double tube extension, 3 m - Ref 27537



Wireless printer - Ref. 27546



SCU for condensate removal - Ref.26811

Selection guide

Technical information



Si-CA 030



Si-CA 130



Si-CA 230

Parameter	Measuring range	Si-CA 030	Si-CA 130	Si-CA 230
# of Gas Sensors		2 - 3	2 - 3	2 - 6
O ₂	0 to 25%	✓	✓	✓
CO	0 to 8000 ppm	✓	✓	-
CO (H ₂ comp.)	0 to 10,000 ppm	-	-	✓
CO (with dilution)	100 to 50,000 ppm	-	-	✓
CO ₂ (calculated)	0 to 99.9%	✓	✓	✓
NO	0 to 5000 ppm	✓	✓	✓
Low NO	0 to 300 ppm	-	✓	✓
NO ₂	0 to 1000 ppm	-	-	✓
Low NO ₂	0 to 100 ppm	-	-	✓
NOx (calculated)	0 to 7500 ppm	✓	✓	✓
Low NOx (calculated)	0 to 450 ppm	-	✓	✓
SO ₂	0 to 5000 ppm	-	-	✓
Low SO ₂	0 to 100 ppm	-	-	✓
CxHy (HC)	0 to 5%	-	-	✓
H ₂ S	0 to 500 ppm	-	-	✓
Flue temperature	-20 to +1250 °C / -4 to +2282 °F	✓	✓	✓
Air temperature	-40 to +120 °C / -40 to +482 °F	✓	✓	✓
Differential temperature	0 to 1250 °C / 0 to 2282 °F	✓	✓	✓
Pressure/Draft	-200 to 200 mbar / -80 to 80 inH ₂ O	✓	✓	✓
High accuracy draft	-500 to +500 Pa	-	✓	✓
Excess air	0 to 999%	✓	✓	✓
Efficiency	0 to 100% (Gross/HHV)	✓	✓	✓
Efficiency (condensation)	0 to 125% (Net/LHV)	✓	✓	✓
Stack Gas velocity	0 to 99 m/s / 0 to 19,500 fpm	-	✓	✓
Application		Residential/ Light Commercial	Residential/ Commercial	Commercial/ Industrial

Features

Wireless Printer	Optional	Optional	Optional
Field-Replaceable Pre-Calibrated Sensors	-	✓	✓
Real time display of data on the smartphone	 	✓	✓
PC Software	-	✓	✓
Automatic Data Logging	✓	✓	✓
Rechargeable Battery w/ AC Charger	✓	✓	✓

Available kits

20 main packs

27496	SICA 030 KIT 2AS	O ₂ /CO	180	Vinyl	Si-CA 030 Gas Analyzer Kit 2AS, includes two gas sensors (O ₂ , CO), 180 mm Probe rated to 800C with 2 m dual hose, vinyl carrying case, rubber holster, water trap with filter, charger with plug set, USB-C cable, quick start guide, calibration certificate
27498	SICA 030 KIT 2BS	O ₂ /CO	300	Vinyl	Si-CA 030 Gas Analyzer Kit 2BS, includes two gas sensors (O ₂ , CO), 300 mm Probe rated to 800C with 3 m dual hose, vinyl carrying case, rubber holster, water trap with filter, charger with plug set, USB-C cable, quick start guide, calibration certificate
27501	SICA 030 KIT 3AS	O ₂ /CO/NO	180	Vinyl	Si-CA 030 Gas Analyzer Kit 3AS, includes three gas sensors (O ₂ , CO, NO), 180 mm Probe rated to 800C with 2 m dual hose, vinyl carrying case, rubber holster, water trap with filter, charger with plug set, USB-C cable, quick start guide, calibration certificate
27507	SICA 130 KIT 2AS	O ₂ /CO	180	Vinyl	Si-CA 130 Gas Analyzer Kit 2AS, includes two gas sensors (O ₂ , CO), 180 mm Probe rated to 800C with 2 m dual hose, vinyl carrying case, rubber holster, water trap with filter, charger with plug set, USB-C cable, quick start guide, calibration certificate
27508	SICA 130 KIT 2AH	O ₂ /CO	180	ABS	Si-CA 130 Gas Analyzer Kit 2AH, includes two gas sensors (O ₂ , CO), 180 mm Probe rated to 800C with 2 m dual hose, ABS hard plastic carrying case, rubber holster, water trap with filter, charger with plug set, USB-C cable, quick start guide, calibration certificate
27509	SICA 130 KIT 2BS	O ₂ /CO	300	Vinyl	Si-CA 130 Gas Analyzer Kit 2BS, includes two gas sensors (O ₂ , CO), 300 mm Probe rated to 800C with 3 m dual hose, vinyl carrying case, rubber holster, water trap with filter, charger with plug set, USB-C cable, quick start guide, calibration certificate
27510	SICA 130 KIT 2BH	O ₂ /CO	300	ABS	Si-CA 130 Gas Analyzer Kit 2BH, includes two gas sensors (O ₂ , CO), 300 mm Probe rated to 800C with 3 m dual hose, ABS hard plastic carrying case, rubber holster, water trap with filter, charger with plug set, USB-C cable, quick start guide, calibration certificate
27511	SICA 130 KIT 3AS	O ₂ /CO/NO	180	Vinyl	Si-CA 130 Gas Analyzer Kit 3AS, includes three gas sensors (O ₂ , CO, NO), 180 mm Probe rated to 800C with 2 m dual hose, vinyl carrying case, rubber holster, water trap with filter, charger with plug set, USB-C cable, quick start guide, calibration certificate
27512	SICA 130 KIT 3AH	O ₂ /CO/NO	180	ABS	Si-CA 130 Gas Analyzer Kit 3AH, includes three gas sensors (O ₂ , CO, NO), 180 mm Probe rated to 800C with 2 m dual hose, ABS hard plastic carrying case, rubber holster, water trap with filter, charger with plug set, USB-C cable, quick start guide, calibration certificate
27522	SICA 2302	O ₂ /CO	300	ABS	Si-CA 230 Analyzer includes two gas sensors (O ₂ , CO), 300 mm Probe rated to 800C with 3 m dual hose, ABS hard plastic carrying case, rubber holster, water trap with filter, charger with plug set, USB-C cable, quick start guide, calibration certificate
27597	SICA 2303N	O ₂ /CO/NO	300	ABS	Si-CA 230 Analyzer includes three gas sensors (O ₂ , CO, NO), 300 mm Probe rated to 800C with 3 m dual hose, ABS hard plastic carrying case, rubber holster, water trap with filter, charger with plug set, USB-C cable, quick start guide, calibration certificate
27598	SICA 2303NL	O ₂ /CO/NO	300	ABS	Si-CA 230 Analyzer includes three gas sensors (O ₂ , CO, Low NO), 300 mm Probe rated to 800C with 3 m dual hose, ABS hard plastic carrying case, rubber holster, water trap with filter, charger with plug set, USB-C cable, quick start guide, calibration certificate
27599	SICA 2304ND	O ₂ /CO/NO/ NO ₂	300	ABS	Si-CA 230 Analyzer includes four gas sensors (O ₂ , CO, NO, NO ₂), 300 mm Probe rated to 800C with 3 m dual hose, ABS hard plastic carrying case, rubber holster, water trap with filter, charger with plug set, USB-C cable, quick start guide, calibration certificate
27600	SICA 2304NS	O ₂ /CO/NO/ SO ₂	300	ABS	Si-CA 230 Analyzer includes four gas sensors (O ₂ , CO, NO, SO ₂), 300 mm Probe rated to 800C with 3 m dual hose, ABS hard plastic carrying case, rubber holster, water trap with filter, charger with plug set, USB-C cable, quick start guide, calibration certificate

NEW

Digital manifolds

Refrigerant handling, maintenance and commissioning



The smart assistant that makes everyone an expert.

These manifolds can be used to commission and service all types of refrigerant-based installations: heat pumps, air conditioning, refrigeration and reversible systems, from domestic systems to complex industrial machines.

Very easy to operate, this equipment features the latest technologies for fast, comprehensive system diagnostics. Its smart digital assistant guides the operator in every situation to help him achieve his objectives in the best possible way.



Heat pump systems



Air conditioning



Refrigeration



Reversible systems

Product overview

Easy operation and full diagnostics at a glance

The ultimate toolkit for refrigeration, air conditioning, and heating professionals



Digital refrigerant manifolds



2-way manifold

Si-RM350 (ref. 28138)



4-way manifold

Si-RM450 (ref. 28139)

Power supply	4 × LR6 or AA 1.5 V batteries. Alternative power supply: USB-C
Battery life	300 hours *
Memory	Up to 9 days of recording
Display	Graphic screen; 240 x 128 px

* At 20°C without backlight and wireless communication



A1 / A2L / A3 refrigerants compatible

Most versatile and futureproof manifold in its range

- Domestic to industrial A/C, heat pumps, refrigeration & reversible systems
- Wired and wireless probes (100 m range)
- 130+ refrigerants supported. Auto updates to industry evolutions



High-speed NTC temperature sensors

Lightning-fast response times to speed up operations

- "Parrot" clamp shape optimized for 6 to 42 mm pipes
- Long-lasting high accuracy
- Real time results on manifold and mobile app



Durable anti-reflective glass screen

Crystal-clear easy-to-read display

- Perfect readability in daylight sun
- Backlit for indoor use
- Industry leading anti-glare design



User-friendly troubleshooting with diagnostics

Quick and easy to operate in all situations

- 8 integrated measurement programs
- New "Easy Mode" with single pressure port connected
- Efficiency calculations: COP and EER ratings



Safe and rugged for long data logging

Maximum reliability for deep diagnostics

- Internal memory data-logging up to 9 days with 300h battery life
- Anti-theft padlock slot, rear hook and USB-C wired power supply
- IP54 dust & rain proof body



New smart assistant app: Sauermann Pilot

Digital tech leveraged to help technicians

- Real time control, readings display and recordings
- Create, sign and send reports with pictures
- Internal detailed customer database management

	Si-RM350	Si-RM450
Pressure valves	3 valves	4 valves
Measuring range	From -1 to 60 bar (-14 to 870 psi)	
Pressure sensing accuracy	±0.50% of full scale	
Resolution	0.01 bar / 0.1 psi / 1 kPa / 0.001 MPa	

Probes and accessories



Wired temperature clamp

Si-RT2 (ref. 28140)

- Innovative "Parrot" shape to handle 6 to 42 mm pipes
- High-speed NTC temperature sensor with high accuracy
- Wide measurement range: -50 to 120°C

Wireless temperature clamp

Si-RT7 (ref. 28142)

- Innovative "Parrot" shape to handle 6 to 42 mm pipes
- High-speed NTC temperature sensor with high accuracy
- Quick & Strong wireless auto connection (100 m range)
- Real time readings on manifold and mobile app
- Measurement range: -20 to 85°C
- IP54 dust & rain proof probe



Wired temperature probe for large diameter pipe

Si-RT5 (ref. 28141)

- Easy grip for large pipes up to 100 mm diameter
- High-speed NTC temperature sensor with high accuracy
- Measurement range: -20 to 85°C



Wireless temp-hygrometer (psychrometer)

Si-TH4 (ref. 28145)

- Fast and accurate Dry Bulb and Wet Bulb temperatures
- Outdoor, indoor and in-ducts measurements
- Flexible probe with sliding magnet for easy positioning
- Quick & Strong wireless auto connection (100 m range)
- Real time readings on manifold and mobile app



Wireless vacuum probe

Si-RV4 (ref. 28143)

- High accuracy Pirani® sensor, 50 microns deep vacuum
- A1, A2L and A3 refrigerants compatible
- Quick & Strong wireless auto connection (100 m range)
- Real time readings on manifold and mobile app
- IP54 dust & rain proof probe



Wireless pressure probe

Si-RP4 (ref. 28144)

- A1, A2L and A3 refrigerants compatible
- Light and curved design for easy plug-in
- Quick & Strong wireless auto connection (100 m range)
- Real time readings through direct connection to mobile app
- IP54 dust & rain proof probe

Digital refrigerant scale

Si-RS1 (ref. 28153)

- Extra Large Back-lit LCD Display
- 3 Display Modes (kg, lb, oz)
- 243 lb (110 kg) Capacity
- Strong Aluminum Base
- Rugged, Non-Slip Platform
- Accuracy $\pm 0.05\%$ of Reading



Two stage Vacuum pump

Si-RVP1 (ref. 110V : 28155 - ref. 220V : 28154)

Si-RVP2 (ref. 28157) Si-RVP3 (ref. 28156)


- Motor: 1/3 HP (Si-RVP1) and 1/2 HP (Si-RVP2 and Si-RVP3)
- Free air displacement (50/60 Hz) : 85/70 lit/min (Si-RVP1) and 170/142 lit/min (Si-RVP2 and Si-RVP3)
- Spark free, A2L & A3 refrigerant (Si-RVP3 - Europe only)
- Refined cartridge machining process creates an improved surface finish extending the longevity of the pump life
- Expanded internal oil path creates less friction and ultimately less heat
- Upgraded seals insure maximum vacuum

Mobile app

Sauermann Pilot

The Si-RM350 and Si-RM450 manifolds, their probes and accessories can be interconnected independently. Additional functionalities can also be accessed via the new Sauermann Pilot mobile application.

Available on iOS and Android, this app provides invaluable assistance with a precise purpose: **to simplify and speed up the work of HVACR professionals.**

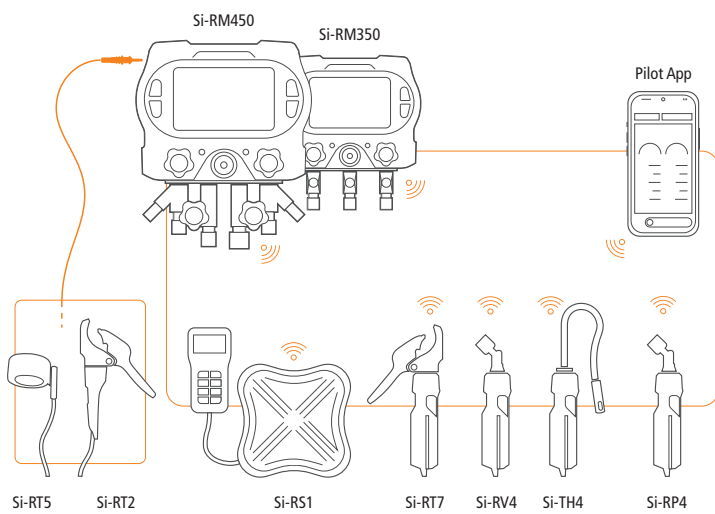

With the ability to connect to multiple devices simultaneously, the free **Sauermann Pilot** app supports the latest Sauermann and Kimo instruments wirelessly on Apple and Android smartphones and tablets.



Download the app
Sauermann Pilot




App Store is a service mark of Apple Inc., registered in the U.S. and other countries.
Google Play and the Google Play logo are trademarks of Google LLC.






Remote visualization and control

Manage the interconnection of probes, vacuum pumps, scale and manifold: ultra-accurate refrigerant handling, measurements and complete diagnostics at a glance!

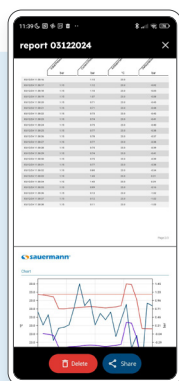

Administrative tasks just a click away

Automated paperwork! Record your measurement campaigns and automatically integrate the results into service reports with digital signatures and photos, all adapted to current and future regulatory requirements.

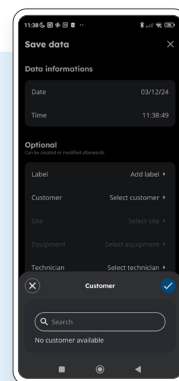

Easy customer management

Save a complete customer database: contact information, detailed installation type, archived jobs and reports... This database is stored locally and protected so that only the user can access it.



Si-RM350 (x1)



Si-RT2 (x2)



Si-RT7 (x2)



Si-RV4 (x1)



Flexibles (x3)

Kit 1 : 28146	●	●			
Kit 2 : 28159	●	●			●
Kit 3 : 28147	●		●		
Kit 4 : 28160	●		●		●
Kit 5 : 28161	●	●		●	



Si-RM450 (x1)



Si-RT2 (x2)



Si-RT7 (x2)



Si-RV4 (x1)



Flexibles (x4)

Kit 1 : 28162	●	●			
Kit 2 : 28163	●	●			●
Kit 3 : 28164	●		●		
Kit 4 : 28165	●		●		●
Kit 5 : 28148	●		●	●	
Kit 6 : 28149	●		●	●	●

Manifolds

100% mobile application



Si-RM3

Smart wireless manifold probes with dual valves

Reference : 25555

The **Si-RM3** manifold comes with two pressure probes (Si-RM1) that accurately measure high side and low side pressure and two temperature probes (Si-RM2) that are used to accurately and simultaneously provide real-time superheat/sub cooling calculations.



Ergonomic design
(45° angle)



Built-in Schrader®
core



Measurement
during charging



Accurate
measurement of high
and low pressure



Real time superheat
and subcooling
calculations



Wireless
connectivity (range
up to 30 metres)



Si-RM13

Combined manifold with smart wireless probes and 2-channel by-pass

Reference : 25558

This **Si-RM13** combines the sturdiness of the analog manifold with digital smart wireless temperature (Si-RM1) and pressure probes (Si-RM2). This premium package includes a traditional 2-channel analog manifold body (by-pass type) with flexible hoses and a durable block made of anodised aluminum.

Technical data

	Si-RM1
Measuring range	-1 to 60 bar
Pressure sensing accuracy	±0.5% of full scale
Overload	65 bar
Burst pressure	150 bar
Battery life	250 h
Protection	IP54

	Si-RM2
Measuring range	-40 to 150 °C
Temperature accuracy	±1.3 °C
Temperature sensor	High-accuracy NTC thermistor
Pipe diameter	6 to 42 mm
Cable	2 m length
Protection	IP54

VACUUM MEASUREMENT



Air conditioning



Heating



Refrigeration

Si-RV3

Smart wireless vacuum probe with dual valves



Sauermann's **Si-RV3** vacuum probe supports the quick, safe evacuation of refrigeration systems and heat pumps with highly accurate measurements. It has an ergonomic design, an excellent Si-Manifold app with wireless connectivity up to a range of 30 metres, and a high-precision Pirani® sensor that provides deep vacuum measurements.

It also provides H₂O evaporation temperature on the Si-Manifold app in real time. A second connector allows for the discharging of the refrigerant, and a built-in Schrader® core avoids any gas leakages when you connect the hose.

Reference: 25554



Ergonomic design
(45° angle)



Built-in Schrader®
core



High accuracy
Pirani® sensor



Vacuum
measurement
during evacuation



Wireless connec-
tivity (range up to
30 metres)

Technical data

Si-RV3

Measuring range	25,000 to 5 microns
Pressure sensing accuracy	±10% of the measured value ±10 microns
Overload	10 bar
Burst pressure	27,5 bar
Battery life	250 h
Protection	IP54

Download the Si-Manifold



Si-Manifold

All-in-one mobile app

The **Si-Manifold app** for iOS and Android provides wireless connectivity up to a range of 30 metres. It has the ability to store and update up to 126 refrigerants, including environmentally-friendly low global warming potential (GWP) and natural refrigerants.

Pressure, condensation/evaporation, pipe, and ambient temperatures are instantly provided on the Si-Manifold app, as are vacuum measurements. Providing these measurements eliminates the need for manual calculations.



Everything you need in one app

- Data logging
- Tightness test
- Pressure target settings
- Vacuum function
- Heating and cooling functions
- etc.

User friendly

- Easy-to-read digital gauge, table and graphic visualisations.

Save and export

- Export reports in PDF, CSV and XML formats for sending by email.
- Dataset can be saved and restarted. This function is very useful for long operations.



Wireless connectivity
(range up to 30 metres)



Stores up to 126
refrigerants



Gauge, table and
graphic visualisations




Export reports

Accessories for our manifold range



R410 gas connector
Reference: 25830

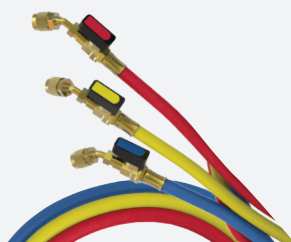

Flexible hoses
Reference: 25831



Velcro® temperature probe
Reference: 26140



Extension cable
Reference: 26141

Services

Expert metrology laboratories at your service



Customer Service Portal

For all repair, return and calibration requests, sign in to our Customer Service Portal.



Accessible 24/7



Quick and simple



Real-time tracking

sauermann.site/help

Our combustion gas analyzers are backed by experts at our metrology laboratories at every stage of their life cycle: from design through to maintenance.

Working from a dedicated combustion gas analysis room, our specialists offer a broad range of services: servicing and repairs on the same sites as our production lines, cell replacement and calibration, plus a hotline, on-premise services and training.



Hotline



After-sales services



Calibration and adjustments



Training

Our experts, based in 800 sq m of laboratory space, provide adjustment and calibration services for all types of measurement instrument:

- Pressure
- Temperature
- Humidity
- Air velocity
- Air flow
- Gas analysis
- Weighing
- Radiometry
- Tachometry
- Light measurement
- Electrical current
- Acoustics



CONDENSATE REMOVAL PUMPS

Detect. Remove. Protect.




Air conditioning



Heating




Refrigeration

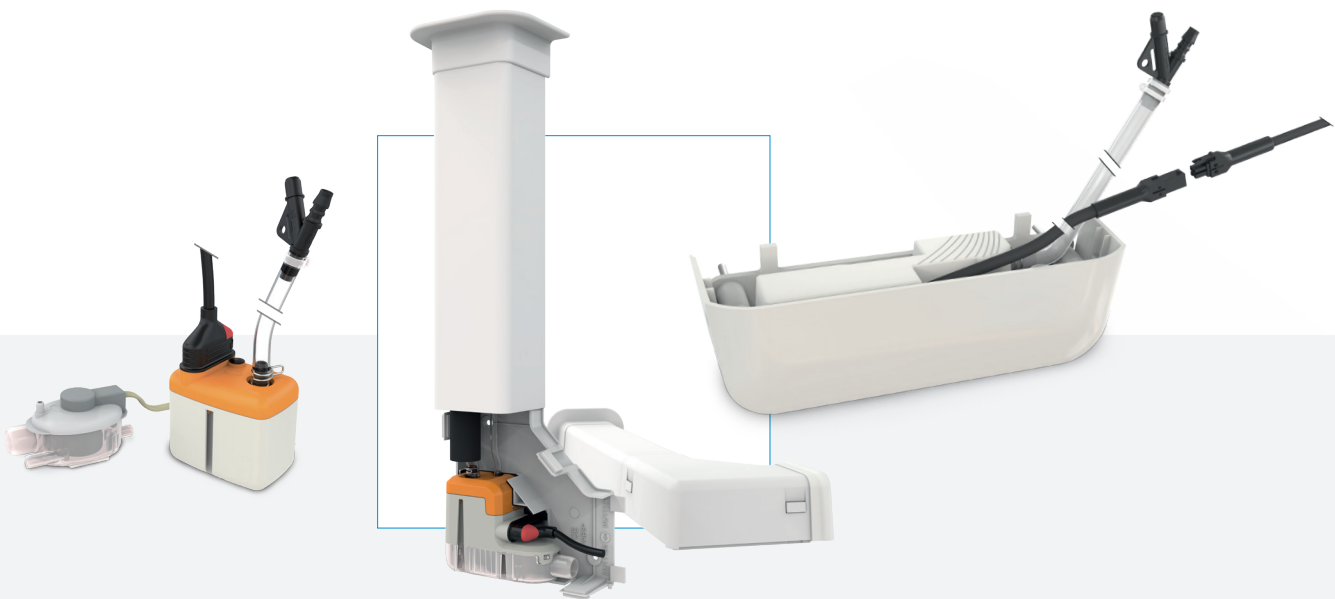

MINI PUMPS



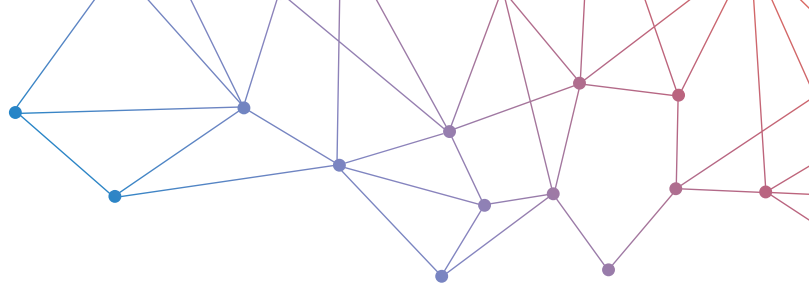

Our condensate removal pumps feature a cutting-edge design that makes them global best-sellers.


Sauermann pumps are compatible with all condensate-generating systems, from domestic air conditioning units to powerful industrial-grade combustion boilers. With more than 45 years of experience in designing condensate removal pumps, our R&D team has developed a range of products that strike the perfect balance between versatility, flexibility, power and reliability.



TANK PUMPS




ACCESSORIES

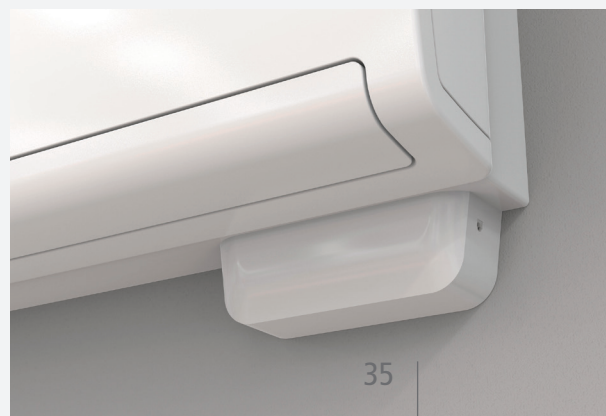

Mini Pumps

Unmatched Reliability

The reliability of Sauermann pumps in 5 key qualities

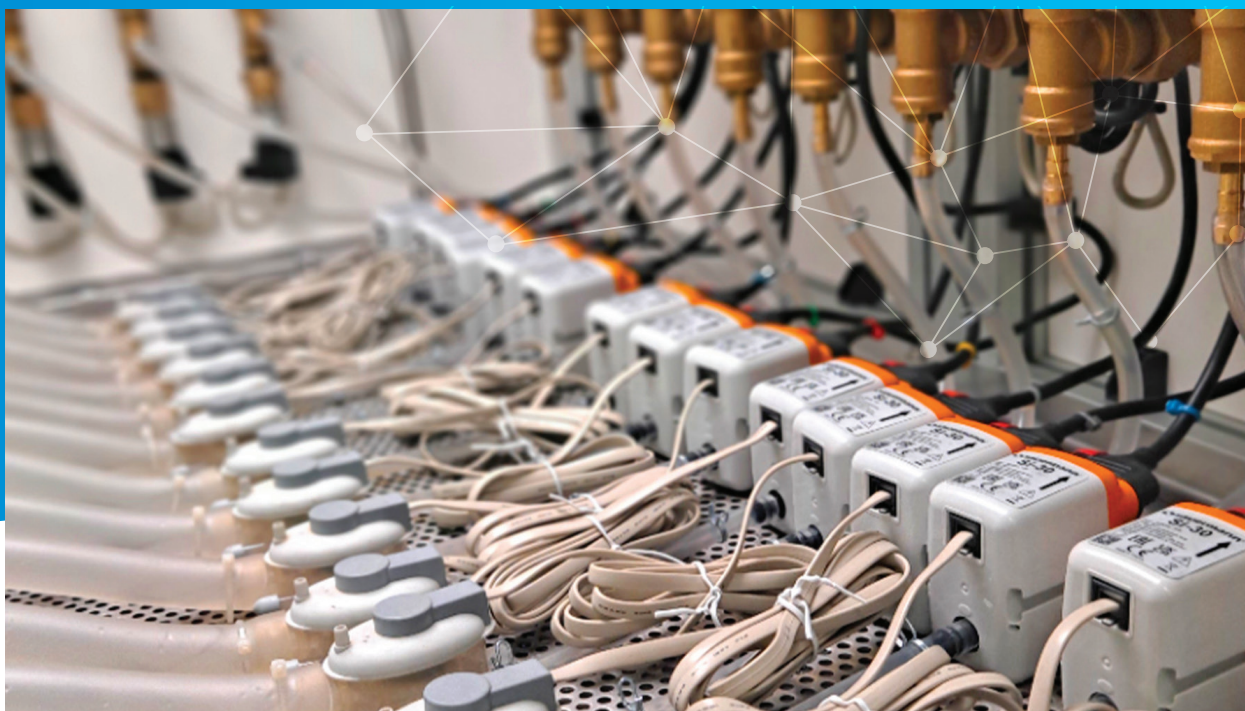

1. Made in France: quality and total control

Unlike many competitors, Sauermann controls its entire mini-pump production chain. From design to manufacture, everything takes place in France at the Chevry-Cossigny factory in Seine-et-Marne.

2. Patented Dual Wave pump core: performance and silence

Sauermann doesn't just follow standards, the company innovates. Its patented Dual Wave piston pump core technology is unique on the market. It uses two phases of alternating current to control the reciprocating motion of the piston.

3. 100% tested pumps: rigour for reliability

This latest pump core is assembled by a fully robotised machine that carries out automated testing of each finished unit. The core is immediately put through its paces in hydraulic tests for tightness and pumping performance. At the end of assembly, the pumps are also tested by an automated machine to ensure that they are energised and start up correctly.

4. Simplified maintenance and accessible spare parts

Sauermann designs its condensate pumps for the long term. The durability of mini pumps also depends on their

ease of maintenance. All Sauermann mini condensate pump control units are designed to provide quick and easy access to components to facilitate maintenance work by installers.

5. Minimal Return Rate: A Mark of Trust

The reliability of Sauermann pumps has been recognized by professionals for over 45 years.

In July 2025, Sauermann chose to increase the warranty period for its pumps by 50%, extending it from 24 to 36 months*.




Mini pumps

A solution for every application


Si-30
ABOVE-UNIT



Si-20
IN-UNIT

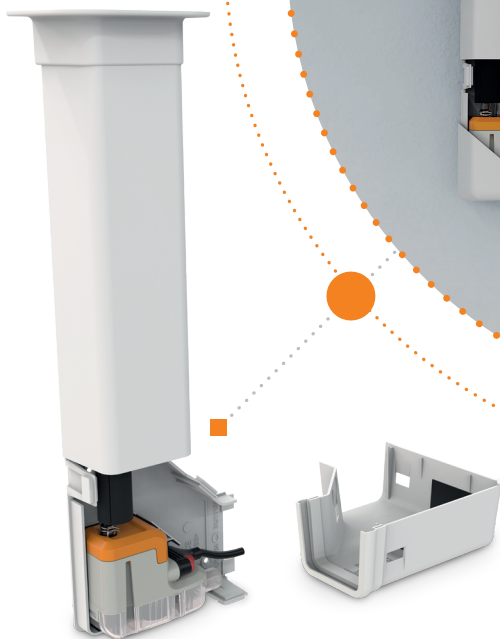

Delta Pack
BESIDE UNIT

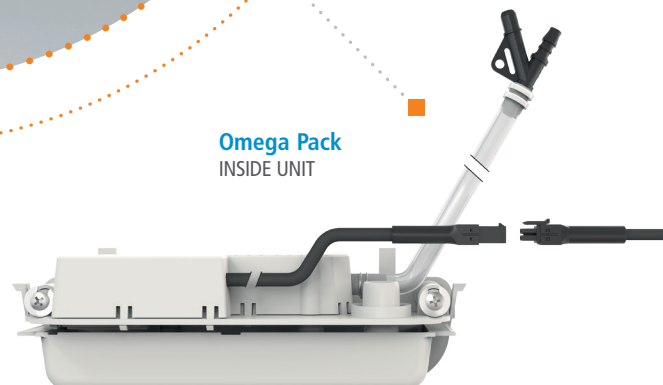


Omega Pack
INSIDE UNIT

Applications

Mini pumps

		Equipment						Location			
		 Air conditioning									
		Wall-mounted	Cassettes	Cabinet coolers	Floor-standing	Ducted unit	Suspended ceiling unit	Inside the unit	Wall-mounted (in trunking)	Wall-mounted (under the unit)	False ceiling
	DELTA PACK	✓	-	-	-	-	-	-	✓	-	-
	Si-10 UNIVERS'L	-	✓	-	✓	✓	✓	✓	-	-	✓
	OMEGA PACK 2	✓	-	-	✓	-	-	-	-	✓	-
	Si-20	✓	-	-	-	-	✓	✓	✓	-	-
	Si-30 Si-33	✓	-	-	✓	-	✓	-	-	-	✓
	Si-50 Si-51 Si-52	✓	✓	-	-	-	-	-	-	-	✓

Actual flow rates

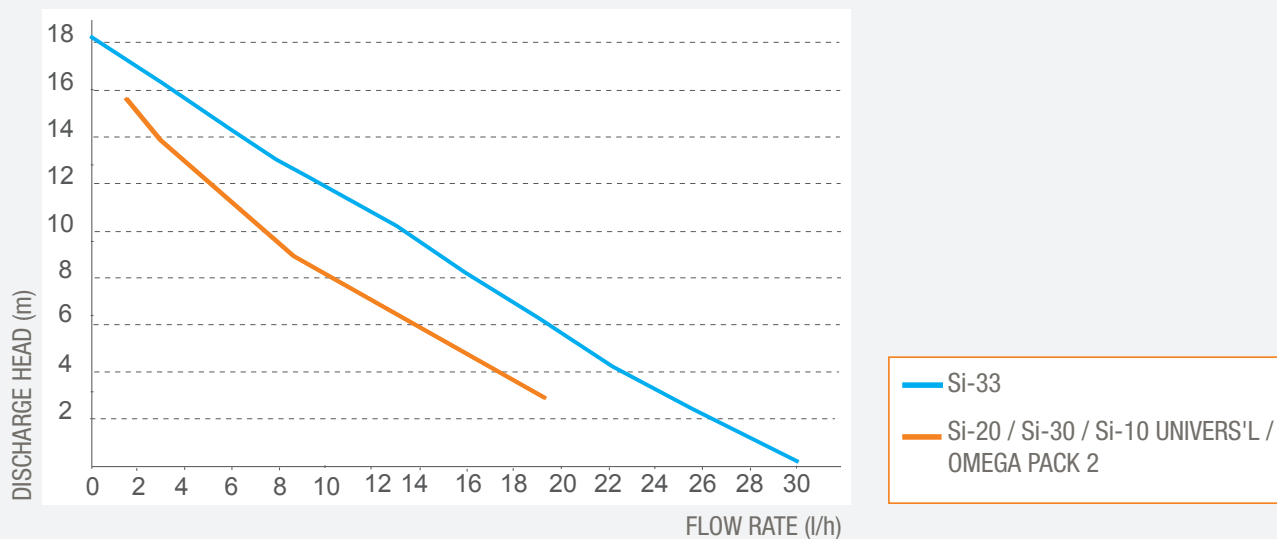

DELTA PACK

For wall-mounted air conditioning units

The Delta Pack includes an elbow design that can be easily opened by hand by a simple finger push – no tool is needed. Its streamlined design complements wall-mounted air conditioning units. It includes the Si-10 Univers'L pump, which incorporates Sauermann's latest piston pump technology. The whisper-quiet pump also comes with insulating foam inside the corner piece and on the pre-installed drain pipe.

References:

80 x 60 mm cream RAL 9001: DP10CE06UN23

80 x 60 mm signal white RAL 9003: DP10CE05UN23



Air conditioning



Easy to install



80 x 60
mm

Wide trunking



22
dBA

Whisper-quiet operation

DELTA PACK kit content

Si-10 Univers'L piston pump - Clear PVC tube (int. Ø 6 mm, L: 1 m, foam-insulated over 800 mm), fitted with a "drain safe device" connector - 1.5 m lockable plug-in power cable, with 2 power wires and 2 NC safety contact wires - 2-part elbow - Ceiling duct cover - Rubber elbow/split gasket - 650 mm rubber tube (int. Ø 15 mm) - Vent pipe - 6 screws and plugs for fixing duct and elbow - 4 double wire clamps Ø 16 mm, 1 double wire clamp Ø 6 mm - 750 mm duct, 80 x 60 mm.

SI-10 UNIVERS'L

Replacement pump for trunking corner pieces

For wall-mounted and floor-standing air conditioning units

The Si-10 Univers'L can replace the majority of corner piece-mounted pumps. It is also suitable as a replacement for Sauermann's Si-10 and SI 1082 models.

Reference: SI10CE03UN23



Universal



Technical data

	Si- 10 UNIVERS'L
Maximum flow rate	20 l/h
Maximum discharge head	10 m (flow rate = 4 l/h)
Pump sound level at 1 m	22 dBA
Detection levels (mm)	ON: 16, OFF: 11, Safety: 19
Mains supply	230 V ~ 50 Hz 14 W
Thermal protection	115 °C (auto-reset)
Protection	IPX4

*According to EN ISO 3744. Measured at LNE lab, pump operating with water, out of application.

NEW

OMEGA PACK 2



Air conditioning

Installation under the unit

Designed to be placed under a wall-mounted air conditioner, the **Omega Pack 2** is an all-in-one solution for optimum condensate drainage.

In a very compact design, the Omega Pack 2 incorporates a new-generation pump equipped with Sauermann's latest patented piston pump core and a large tank insulated to prevent condensation.



Reference: OP20CE04UN23



Compact, elegant design.
Pure white (RAL 9003).



Isolated tank: prevents condensation forming on the pump.



Quick & easy single plug connector.



Optimum discretion




Top performance



Lightning installation and maintenance

Kit content

1 Omega Pack 2 with integrated piston pump, detection unit and 0.2 m length connector. 1 Soft transparent PVC tube int. Ø 6 mm, 1 m length, factory fitted with pre-mounted "Drain Safe Device". 1 power & alarm cable, 1.5 m length with connector. 1 soft PVC tube, 250 mm length, int. Ø 15 mm. 2 screws + 2 plugs + 2 washers. 3 rislans.

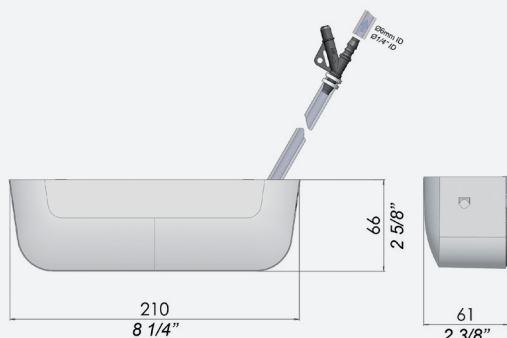

Technical data

	Omega Pack 2
Max. flow rate	20 l/h
Max. discharge head	10 m - débit = 4 l/h
Sound level at 1 m*	≤ 22 dB(A)
Detection levels (mm)	On: 24 mm; Off: 20 mm; Safety: 27 mm
Safety switch	NF 5 A résistif – 250 V
Thermal protection (overheating)	115 °C (auto-reset)

* Le niveau sonore dépend des conditions et du support d'installation.

Si-20



Air conditioning

Installation inside the unit


The **Si-20** sets a new record for its slim casing design, allowing it to easily fit inside any type of air conditioning unit or lineset cover.

Offering best-in-class performance and sound levels for a mini pump of its size, this model delivers unmatched reliability.

Reference: SI20CE02UN23



Discreet integration inside the split. The slimmest mini pump money can buy (27 x 27 mm).

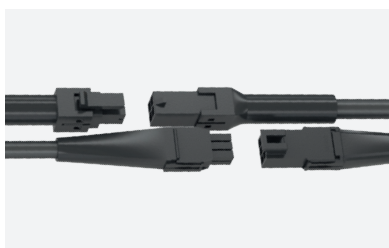

Plug and play



Last gen. patented pump core.



Size minimum




Easy to install



Highly reliable

Kit content

1 Piston pump with connectors: 1.5 m power supply cable, pump cable 0.2 m. 1 Detection unit with connector (1.5 m power cable) Clear PVC tube int. Ø 6 mm - L 60 mm, fitted with pre-mounted "Drain Safe Device" connector. PVC tube int. Ø 6 mm - L 0.63 m, fitted with insulating foam. Detection unit installation kit: - rubber elbow 90° int. Ø 15 mm x L 152 mm - vent tube int. Ø 4 mm x L 75 mm - mounting rail - adhesive - 3 double wire clamps - 3 tie wraps, 2.5 x 200 mm. 1 attachment unit: 1 mounting plate + 1 rubber damper.

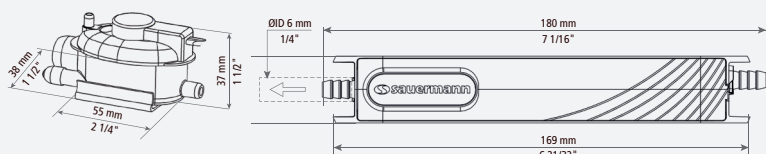

Technical data

	Si-20
Maximum flow rate	20 l/h
Maximum discharge head	10 m (flow rate = 4 l/h)
Pump sound level at 1 m*	19 dBA
Detection levels (mm)	ON: 16, OFF: 11, Safety: 19
Mains supply	30 V~ 50 Hz - 15 W
Thermal protection	115 °C (auto-reset)
Protection	IPX2

Si-30 / Si-33



Air conditioning

Mini pumps with float detection

The pump mechanism inside the Si-30 and Si-33 models is specially designed by Sauermann to remove condensates produced by air conditioning units.

References:

Si-30: SI30CE02UN23

Si-33: SI33CE01UN23



Patented Sauermann technology, specifically designed for removing condensates from air conditioning systems.



The pre-installed anti-siphon connector eliminates the risk of siphoning.



The mounting plate means the pump can be mounted on a wall, hung on the ceiling or affixed directly to a pipe.



Proven reliability




Ultra-reliable installation



Fits into any location

Kit content

Pump - Clear PVC tubing (int. Ø 6 mm, L: 1 m), fitted with a pre-mounted "drain safe device" connector - Anti-vibration mounting bracket - 1.5 m lockable plug-in power cable with NC safety contact wires - 6 tie wraps - Detection unit (SI2958) with installation kit: rubber elbow 90° (int. Ø 15 mm, L: 60 mm), vent tube, mounting rail, adhesive.

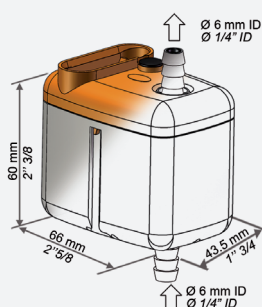

Technical data

	Si-30	Si-33
Maximum flow rate	20 l/h	30 l/h
Maximum suction height	3 m	3.3 m
Maximum discharge head	10 m (flow rate = 4 l/h)	> 13 m (flow rate = 8 l/h)
Pump sound level at 1 m*	20 dBA	34 dBA
Detection levels (mm)	ON: 16, OFF: 11, Safety: 19	
Mains supply	230 V ~ 50 Hz 14 W	230 V ~ 50 Hz 21 W
Protection	IP20	

* According to EN ISO 3744. Measured at LNE lab, pump operating with water, out of application.

NEW



Air conditioning

Si-50, Si-51 and Si-52

Peristaltic pumps for wall-mounted split units, suspended ceiling units, ducted units and cabinet coolers up to 8 kW

Among the most compact on the market, peristaltic pumps combine quiet operation with practical, clever design. These pumps are suitable for commercial and

industrial environments with dust or chemical exposure. Their activation mode allows installation away from the air conditioner, making them ideal for hotels or hospitals.




Si-50



Si-51



Si-52

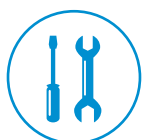

Easy maintenance




3 detection systems

References:

PE5000: PE5000SIUN23
PE5100: PE5100SIUN23
PE5200: PE5200SIUN23

Kit contents

Peristaltic pump, 1.7 m power cable with 2 wires (phase and neutral), sliding plastic plate with mounting screws, Ø 15 to Ø 6 mm adapter, Ø 15 x 35 mm sleeve. Additional content for Si-51: 2 thermal sensors with 3.5 m cable. For Si-52: float detection block (SI2958) with 1.5 m cable, detection block installation kit.

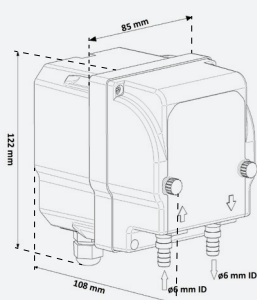

Technical data


	PE 5000 / PE 5100 / PE 5200
Maximum flow rate	6 l/h
Maximum discharge head	12 m
Pump sound level at 1 m*	≤ 30 dBA
Detection levels PE 5200 (mm)	ON: 16, OFF: 11, Safety: 19
Mains supply	230 V~ 50/60 Hz -75 W
Protection	IPX4

*According to EN ISO 3744. Measured at LNE lab, pump operating with water, out of application.


Tank pumps

Powerful and built to last

For managing large volumes of condensate

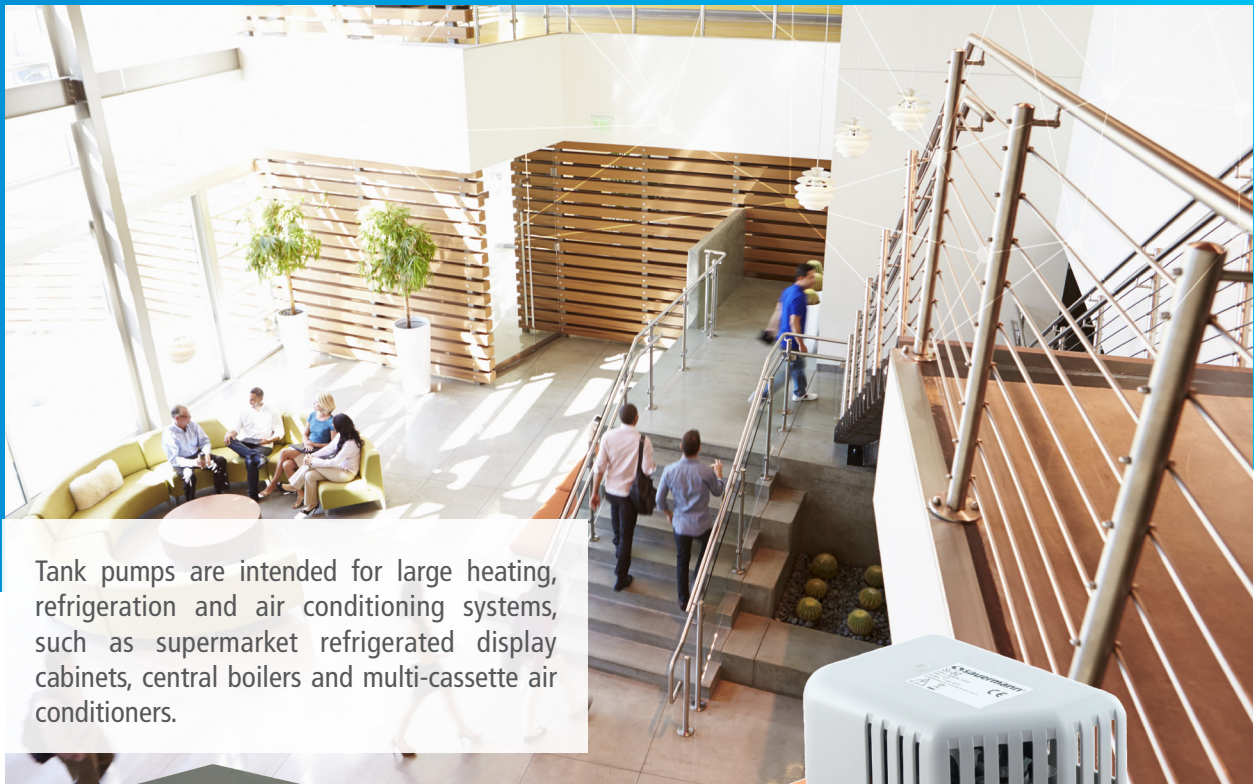

Tank pumps are intended for large heating, refrigeration and air conditioning systems, such as supermarket refrigerated display cabinets, central boilers and multi-cassette air conditioners.

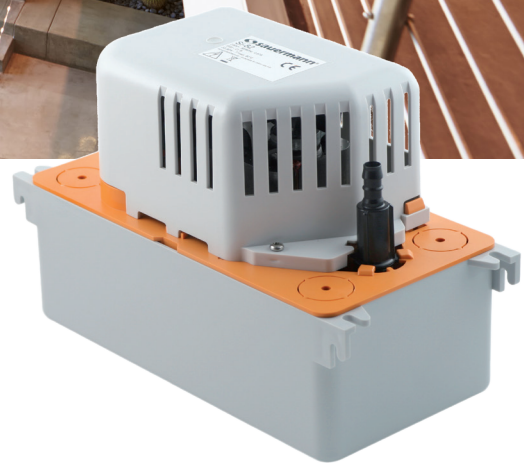

Sauermann tank pumps are built for power and durability, so they can withstand even the toughest conditions.

Our tank pumps are specially designed for high-powered air conditioning, heating and refrigeration systems that generate large volumes of condensate. They're also built to handle hot, acidic, biofilm-heavy and other special types of condensate.

Applications

Keep complex systems protected

		Capacity		Equipment								Location				
																
				Air-cond.		Heating				Refrig.						
				Domestic use	Intensive use	Domestic air conditioning	Cassette Ducted unit Multi-cassette system			Domestic gas-fired condensing boiler	Domestic oil-fired condensing boiler					
	Si-83	✓	-	✓	-	✓	-	-	-	-	✓	✓	✓	-	-	
	Si-82	-	✓	-	✓	✓	-	✓	✓	-	✓	✓	-	-	-	
	SI 1805	-	✓	-	✓	✓	-	-	✓	-	-	-	✓	-	-	
	SI 1830	-	✓	-	-	-	✓	-	-	-	-	✓	✓	✓	-	
	Si 1850	-	✓	-	✓	✓	-	-	-	✓	✓	-	-	-	-	
	Si-60	-	-	✓	✓	-	-	✓	-	-	-	-	-	✓	✓	
	Si-1931	-	✓	-	-	-	-	-	-	✓	✓	-	✓	-	-	



Si-82



Air conditioning



Heating



Refrigeration


For cassette, multi-cassette and ducted air conditioning systems, dehumidifiers, small refrigerated display cabinets and gas-fired condensing boilers

The **Si-82** is designed for easy installation in any situation: floor-standing, wall-mounted or hanging on the ceiling. The pump can remove up to 500 litres per hour and can withstand acidic and charged condensates, making it ideal for air conditioning and refrigeration systems.

References:

PACK 1: SI82CE01UN23


PACK 2 + pH Safe: SI82CE03UN23

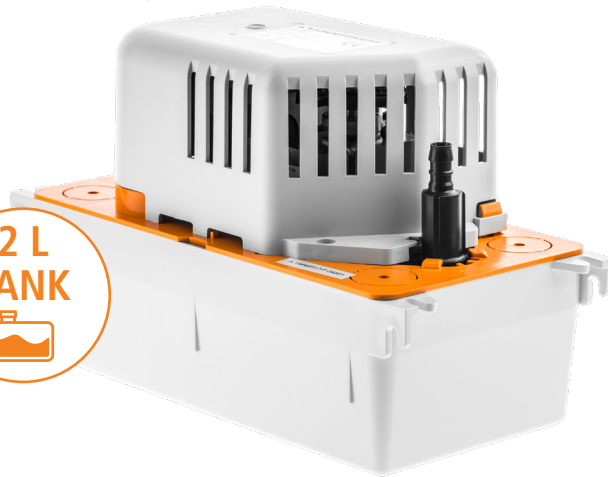

Removable cable for easy installation and maintenance.



Non-return valve for easily connecting Ø 10 mm pipes. Four condensate inlets with caps.

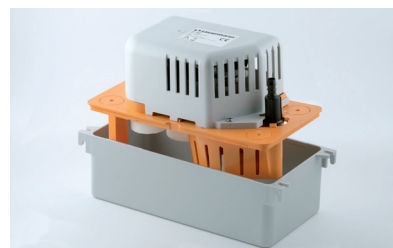

Mounting points for floor-standing, ceiling and wall-mounted installation. Reversible tray.



Quick power connection



Easy hydraulic connection




Fits into any location

Kit contents

PACK 1: One-piece centrifugal pump - Tank (2 l) – Built-in non-return valve (10 mm ext. Ø) - Plug-in cable: power (2 m, European plug) and NC safety contact (1.5 m, bare ends) - Straight connector (ext. Ø 10 mm / ext. Ø 6 mm) - 2 screws + 2 plugs.

PACK 2: One-piece centrifugal pump with tank (2 l) - Plug-in cable: power (2 m, European plug) and NC safety contact (1.5 m, bare ends) - Clear PVC tube: int. Ø 10 mm, 6 m - Flexible adapter (int. Ø 15-20-24-32-40 mm) - 2 screws + 2 plugs. The **PACK 2 + pH Safe** option includes one pH Safe 1 neutralization cartridge.

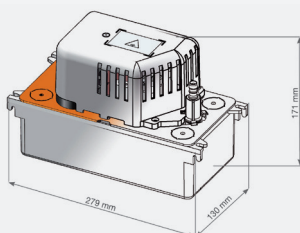

Technical data

	Si-82
Maximum flow rate	500 l/h
Maximum discharge head	5 m (flow rate = 50 l/h)
Pump sound level at 1 m*	< 45 dBA
Detection levels (mm)	ON: 53, OFF: 42, Safety: 64
Mains supply	230 V ~ 50/60 Hz - 70 W
Protection	IP20

*According to EN ISO 3744. Measured at LNE lab, pump operating with water, out of application.
Suitable as a replacement for the SI 1800 and SI 1805 models.

Si-83



Air conditioning



Heating

For domestic air conditioning systems and domestic gas-fired condensing boilers

The **Si-83** is more compact than any other pump in its class. With five condensate inlet options and a slimline profile (just 129 mm), it's ideal for installing under domestic gas-fired condensing boilers (up to 40 kW). The SI83CE43UN23 model comes with a neutralization cartridge that effectively neutralizes the acidic condensates produced by domestic gas-fired condensing boilers. The versatile Si-83 pump is also perfect for domestic air conditioning systems (up to 20 kW).

The pump even comes with its very own smartphone app – the Si-83 MobileApp – that makes installation both simple and intuitive.



References:

PACK 1: SI83CE01UN23

PACK 2: SI83CE42UN23

Pack 2 + pH Safe: SI83CE43UN23



Easier to install than anything in its class



Neutralization




Si-83 MobileApp

Kit contents

PACK 1: Centrifugal pump with 2 l tank - Removable non-return valve, ext. Ø 10 mm - 1.8 m power cable, plug - Built-in safety switch, 1 m wires, plug, NC contact - 2 screws + 2 plugs - Straight connector and tie wrap for 6 mm int. Ø tubes.

PACK 2: Centrifugal pump with 2 l tank - Removable non-return valve, ext. Ø 10 mm - 1.8 m power cable, plug - Built-in safety switch, 1 m wires, bare ends, NO contact in Pack 2 - 2 screws + 2 plugs - Multi adapter to be used for Ø 15/17 - 20 - 24/25 - 32 - 40 mm tubes - Clear PVC tubing, int. Ø 10 mm, 6 m. The PACK 2 + pH Safe option includes one pH Safe 1 neutralization cartridge.

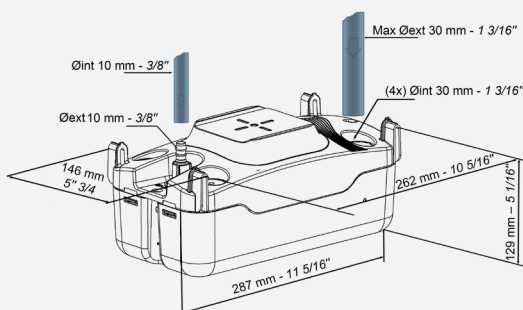

Technical data

	Si-83
Maximum discharge head	5,4 m (65 l/h)
Maximum pressure (flow rate 0)	5,7 m
Pump sound level at 1 m*	<45 dBA
Operating cycle	7%, non-continuous
Mains supply	230 V~ 50 Hz - 115 W - 1.4 A
Protection	IP44

SI 1805



Air conditioning



Heating

For cassette, multi-cassette and ducted air conditioning systems, small refrigerated display cabinets and gas-fired condensing boilers

The **SI 1805** is designed for easy installation in any conditions.

The pump can remove up to 500 litres per hour, making it ideal for air conditioning and refrigeration systems.

The robust SI 1805 pump easily withstands the charged, high-temperature and acidic (pH > 3.4) condensates produced by gas-fired condensing boilers.

Reference:

SI1805SIUN23



High capacity



Compact



**Ultra-reliable
Can be installed
anywhere**



Kit content

Pump - 2 screws + 2 plugs - 2 m power cable with European plug, safety switch cord: 1 m, 2 wires (NC contact).

Dimensions

L 195 x W 130 x H 132 mm

Technical data

	SI 1805
Maximum flow rate	500 l/h
Maximum discharge head	5,4m
Pump sound level at 1 m*	≤ 47 dBA
Detection levels (mm)	ON: 27, OFF: 21, Safety: 32
Mains supply	230 V~ 50/60 Hz -90 W
Protection	IP20

*According to EN ISO 3744. Measured at LNE lab, pump operating with water, out of application.

SI-1830 / SI 1850



Air conditioning



Heating



Refrigeration

For oil-fired condensing boilers

The **SI-1830** is built for use in the toughest conditions. It easily withstands the charged (e.g. oil residues), hot and highly acidic condensates produced by oil-fired condensing boilers.

Its watertight case protects the motor from acidic fumes and water splashes.

The SI-1830 can also be installed without its tank, directly in the condensate tray.

The 3.8 litre tank means the **SI 1850** can remove up to 1,100 litres per hour, making it suitable for high-powered air conditioning and refrigeration systems. The robust SI 1850 pump easily withstands the charged, high-temperature condensates produced by gas-fired condensing boilers.

References:

SI1830SCUN23

SI1850SIUN23



High performance



Rugged design



Kit contents

SI-1830: Pump with 0.5 l tank - 1.5 m power cable with European plug, safety switch cord: 1 m, 2 wires (NC contact) - Installation kit: 2 screws + 2 plugs, clear PVC tube (int. Ø 10 mm, 5 m), flexible adapter (Ø 15-24-32-40 mm).

SI 1850: One-piece centrifugal pump with 3.8 l tank - Built-in non-return valve, ext. Ø 10 mm.

Dimensions

SI-1830: L 190 x W 80 x H 100 mm

SI 1850: L 305 x W 152 x H 257 mm

Technical data

	SI 1830	SI 1850
Maximum flow rate	400 l/h	1 100 l/h
Maximum discharge head	3,7 m	10 m
Pump sound level at 1 m*	≤ 43 dBA	≤ 66 dBA
Detection levels (mm)	ON: 32, OFF: 25, Safety: 39	ON: 81, OFF: 48, Safety: 101
Mains supply	230 V~ 50/60 Hz 75 W	230 V~ 50 Hz 200 W
Protection	IPX4	IP20

*According to EN ISO 3744. Measured at LNE lab, pump operating with water, out of application.

Si-60



Air conditioning

For ducted air conditioning systems and cabinet coolers

The Si-60 pump with built-in tank (0.37 L) is suitable for air conditioning units up to 20 kW. This pump is equipped with Sauermann's piston pump technology specifically designed for removing condensates, and with a reliable anti-clogging detection system for use in all types of environment. install in any location.

Reference: SI60CE01UN23



Twist-lock power cable for secure connection.



Reliable anti-clogging detection system for use in all types of environment.



Top and bottom condensate inlet. Can also be installed directly in the tray.

Kit content

Pump - Lockable plug-in 1.5 m cable with NC safety contact wires - Installation kit: adapter (int. Ø 15-20-24-32-40 mm), 90° rubber connector (int. Ø 15 mm, L: 60 mm), 90° plastic connector for int. Ø 6 mm flexible tube, 1 2.5 × 100 mm tie wrap.

Technical data

Si-60	
Maximum flow rate	20 l/h
Maximum discharge head	10 m (flow rate = 4 l/h)

Dimensions


L 168 x W 90 x H 88 mm

Si-2052

Maintenance kit for cassette-type systems with centrifugal pump

The Si-2052 pump can be used as a replacement for some Sauermann pumps installed in series on cassette-type and ceiling-mounted air conditioning units up to 20 kW. The centrifugal technology inside this pump is specially designed to remove condensates quietly and continuously in any type of environment.

Reference: SI2052SIUN23

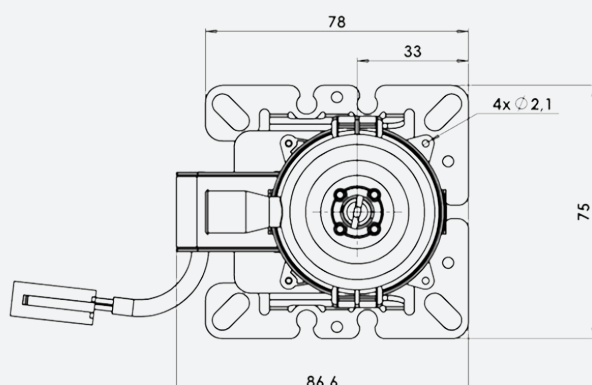

Compatible with most market-standard models

Technical data

SI 2052	
Maximum flow rate	100 l/h at 200 mm
Maximum discharge head	0.9 m (24l/h)



Si-1931

Dairy pump for refrigerated display cabinets

Specially designed to handle condensate from supermarket refrigerated display cabinets, the Si-1931 pump also offers a proven solution against the formation of biofilm with its Gel-clear tablet.

The compact design of the pump facilitates installation under low-slung display cabinets.

- Ultra-flat profile: 80 mm high.
- Three inlet points: top, right or left.
- Keeps the condensate drain clear.
- Reduces water leaks by more than 90%.
- Prevents the formation of biofilm and extends pump life.

Reference:

SI1931CE01EU23



**Reduced
operation costs**



**Easy installation –
easy maintenance**



**Gel-clear tablet: the proven
anti-biofilm solution**



Kit content

Dairy pump with a power cable (NO safety contact) and a 13 mm outlet - Outlet adapter, Ø 10 mm - Hard plastic inlet adapter, Ø 40 mm - 2 Gel-clear tablets.

Technical data

	Si-1931
Flow rate at 6 m	700 l/h
Maximum discharge head	24.6 m
Protection	IP20
Pump dimensions	L 610 x W 235 x H 80 mm
Tank volume	6.5 l

Accessories

Accessories suitable for all makes and applications

Pipes and fittings (Ø 6 and Ø 10 mm)



Double wire clamp

To ensure safe connection between connectors and a clear PVC tube.

Dimension	Qty per bag	Ref.
Ø 6 mm	25	ACC00912
Ø 10 mm	25	ACC00913

Double wire clamp for braided tube

To ensure safe connection between connectors and a braided PVC tube.

Dimension	Qty per bag	Ref.
Ø 6 mm	25	ACC00916
Ø 10 mm	25	ACC00917



Straight connector

To connect two Ø 6 mm (1/4") or Ø 10 mm (3/8") clear PVC tubes.

Dimension	Qty per bag	Ref.
Ø 6 mm	5	ACC00900
Ø 10 mm	5	ACC00901



Elbow connector

To connect two Ø 6 mm (1/4") or Ø 10 mm (3/8") clear PVC tubes.

Dimension	Qty per bag	Ref.
Ø 6 mm	5	ACC00904
Ø 10 mm	5	ACC00905



"T" reducer multi diameter

To connect three PVC tubes, one Ø 6 mm int. (1/4") and two Ø 10 mm int. (3/8").

Dimension	Qty per bag	Ref.
Ø 6 to 2x Ø 10 mm	5	ACC00907



Self-sealing drainage fitting

Used to connect a PVC tube to the exhaust pipe.

The self-sealing fitting makes the connection reliable.

Dimension	Qty per bag	Ref.
Ø 6 mm	5	ACC00919
Ø 10 mm	5	ACC00920



"T" connector

To connect three Ø 6 mm (1/4") or Ø 10 mm (3/8") clear PVC tubes.

Dimension	Qty per bag	Ref.
Ø 6 mm	5	ACC00902
Ø 10 mm	5	ACC00903



Reducer connector

Reduces diameter of tubing coming out of a tank pump from Ø 10 mm (3/8") to Ø 6 mm (1/4").

Dimension	Qty per bag	Ref.
Ø 6 to Ø 10 mm	5	ACC00906



Rubber reducing adapter

To connect a Ø 20 mm (1 1/2") PVC tube to a Ø 10 mm (3/8") PVC tube.

Dimension	Qty per bag	Ref.
Ø 20 to Ø 10 mm	3	ACC00908



Non-return valve

In-line non-return valve for Ø 6 mm (1/4") PVC tubes.

Dimension	Qty per bag	Ref.
Ø 6 mm	5	ACC00924



Clear PVC tubing

Clear PVC tubing for connecting the pump to the discharge outlet.

Dimension	Qty per bag	Ref.
Ø 6 mm - 5 m	1	ACC00909
Ø 6 mm - 50 m	1	ACC00910
Ø 10 mm - 25 m	1	ACC00911



Braided tube

Clear PVC braided tubing for connecting the pump to the discharge outlet.


Dimension	Qty per bag	Ref.
Ø 6 mm - 50 m	1	ACC00914
Ø 10 mm - 25 m	1	ACC00915



Glued fitting

This fitting is perfect for connecting transparent pipes on new installations, in combination with a glue suitable for rigid ABS and soft PVC.

Dimension	Qty per bag	Ref.
Ø 6 or Ø 10 mm	1	ACC00921

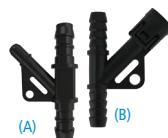

Drain safe device

Ensures there is no siphoning effect and that the pump will not run dry and stop working.

Dimension	Qté/sachet	Ref.
Ø 6 mm	5	ACC00922 (A)
Ø 6 mm	5	ACC00950 (B)
Ø 10 mm	5	ACC00923 (A)



Detection mini pumps



Double wire clamp

With a diameter of Ø 16 mm (5/8"), it is used for tubes coming out of the condensate tray.

Dimension	Qty per bag	Ref.
Ø 16 mm	25	ACC00930



Elbow rubber adapter

Its length (142 mm, 6"), width (35 mm, 1 9/32") and diameter (16 mm, 5/8") make it easy to install.

Dimension	Qty per bag	Ref.
Ø 16 mm - 35mm x 142mm	3	ACC00934



Reducing adapter

To reduce diameter between the AC condensate tank and the detection unit inlet.

Dimension	Qty per bag	Ref.
Ø 32 to Ø 16 mm	3	ACC00926



Multi diameter reducing adapter

To connect tubes of Ø 6 mm (1/4"), Ø 10 mm (3/8") or Ø 12 mm (1/2") to tubes of 16 mm (5/8").

Dimension	Qty per bag	Ref.
Ø 6 to Ø 10, 12, 16 mm	5	ACC00927



Straight connector

To connect two Ø 16 mm (5/8") rubber tubes together.

Dimension	Qty per bag	Ref.
Ø 16 mm	5	ACC00928



Drain tray connector

To facilitate the installation of the detection unit of a mini pump detection unit into a mini split.

Dimension	Qty per bag	Ref.
Ø 16 mm	3	ACC00929



Clear hose

For connecting the AC condensate tank outlet to a mini pump detection unit. Ø 16 mm (5/8").

Dimension	Qty per bag	Ref.
Ø 16 mm - L 600 mm	1	ACC00931



90° rubber elbow adapter

For connecting the AC condensate tank outlet to a mini pump detection unit.

Dimension	Qty per bag	Ref.
Ø 16 mm - 35mm x 35mm	3	ACC00932



"S" type rubber hose

To connect the AC condensate tank outlet to a mini pump detection unit.


Dimension	Qty per bag	Ref.
Ø 16 mm - L 55 mm	3	ACC00933



Extension cable for use with the Si-2958 detection unit

To increase the length between the detection unit and the pump – for use with the Si-2958 detection unit.

Dimension	Qty per bag	Ref.
3 m	1	ACC00942
5 m	1	ACC00943

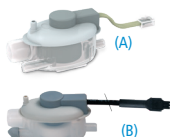

Si-2958

Replacement detection unit for Si-20, Si-30, Si-33 and PE5200 pumps.

Dimension	Qty per bag	Ref.
-	1	SI2958 (A)
-	1	ACC02958 (B)



Replacement floats

for the detection blocks of bi-block piston pumps (A) and monobloc piston pumps (B).

Compatible	Qty per bag	Ref.
SI2958 detection unit	5	ACC00946
Si-10 Univers'L	5	ACC00947



Centrifugal pumps



Push fit fitting tank connector

To channel condensate through the side of the tank. For 32 mm (1" 1/4) tubes

Dimension	Qty per bag	Ref.
Ø 32 mm	1	ACC00940



Non-return valve

Non-return valve for use with Sauermann centrifugal pumps. For Ø 10 mm (3/8") tubes.

Dimension	Qty per bag	Ref.
Ø 10 mm	3	ACC00925



Rubber multi diameter condensate inlet adapter

Multi diameter adapter to be used for a range of different tubes.

Dimension	Qty per bag	Ref.
Ø 15 to Ø 20, 24, 32, 40 mm	3	ACC00939



Rubber condensate inlet adapter

To channel condensate into a tank pump through a PVC tube.

Dimension	Qty per bag	Ref.
Ø 25 to Ø 20 mm	3	ACC00936
Ø 32 to Ø 20 mm	3	ACC00937
Ø 40 to Ø 20 mm	3	ACC00938



Peristaltic Pumps



Replacement head and tube

Spare parts for Si-50, Si-51, and Si-52 peristaltic pumps

Compatibility	Qty per bag	Ref.
Replacement head	1	ACC00954
Replacement tube	1	ACC00953



Anti-biofilm



Gel-clear tablets

Replacement tablets for Si-1931 pumps fitted to refrigerated display cabinets.

Dimension	Qty per bag	Ref.
-	1	SPSI93T1
-	10	SPSI93T10



Neutralization



pH Safe 1

Neutralization cartridge for use with the Si-82 and Si-83 pumps to effectively neutralize the condensates produced by gas-fired condensing boilers. Capable of neutralizing up to 800 litres of acidic condensates per year at pH3.

Dimension	Qty per bag	Ref.
-	1	PH0100SIUN23



pH Safe 2

For neutralizing the condensates produced by gas-fired condensing boilers. Capable of neutralizing up to 6 litres of acidic condensates per hour at pH3.

Dimension	Qty per bag	Ref.
-	1	PH02CE01UN00



Miscellaneous



Priming squeeze bottle

After the installation or the maintenance of a condensate removal pump, this bottle helps start or clean the system.

Dimension	Qty per bag	Ref.
-	1	ACC00944

Sauermann online




All our products

Detailed specifications and photos of all our measurement instrument and pump ranges.




Resource centre

Get all the resources you need, from technical data sheets, manuals and catalogues, to software and apps.

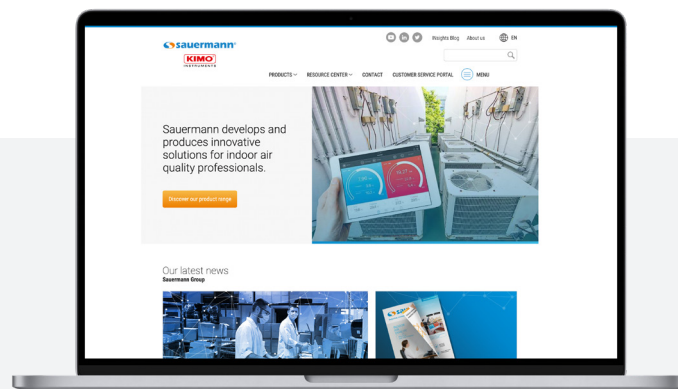

sauermanngroup.com

Professional solutions for condensate management and indoor air quality measurement

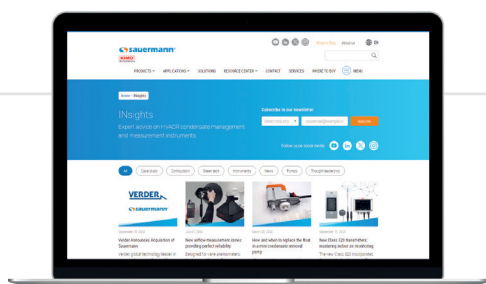

INsights

Case studies, useful information and practical advice for HVAC and indoor air quality professionals.

sauermanngroup.com/en-INT/insights




Scan me to view all our Sauermann and Kimo catalogues online

Sauermann on YouTube

Head to our YouTube channel for tutorials, webinars and product guides.

youtube.com/sauermanngroup

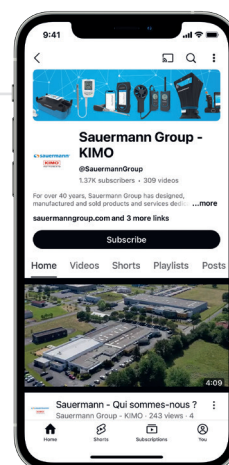

To learn more, please visit:
sauermanngroup.com